


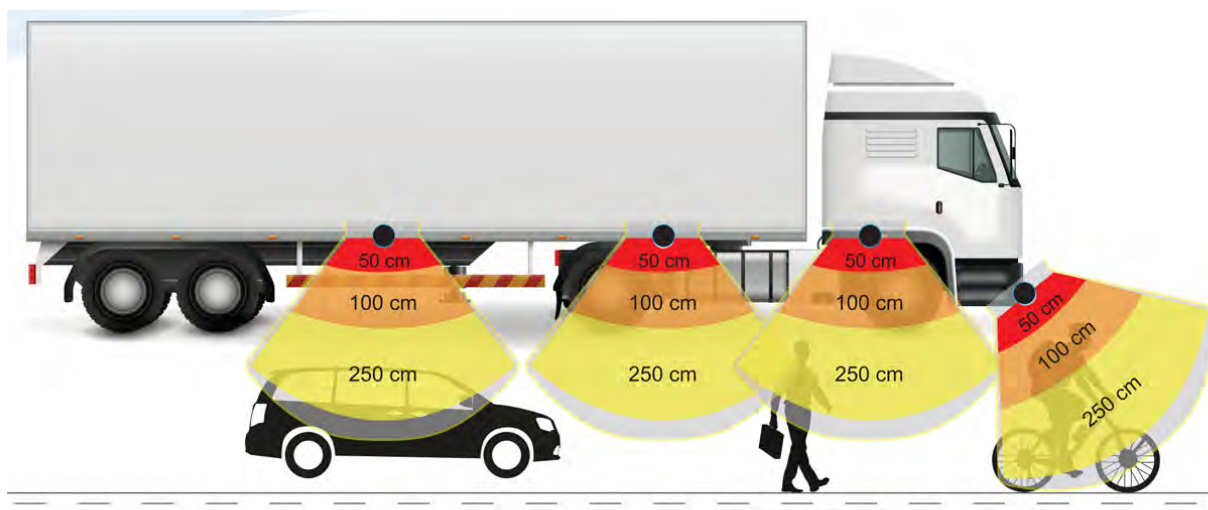

Instruction Manual

Blind Spot Sensor System




RVS-127



*Engineered For
Vehicle Safety.*[™]

RVS


A Safe Fleet Brand

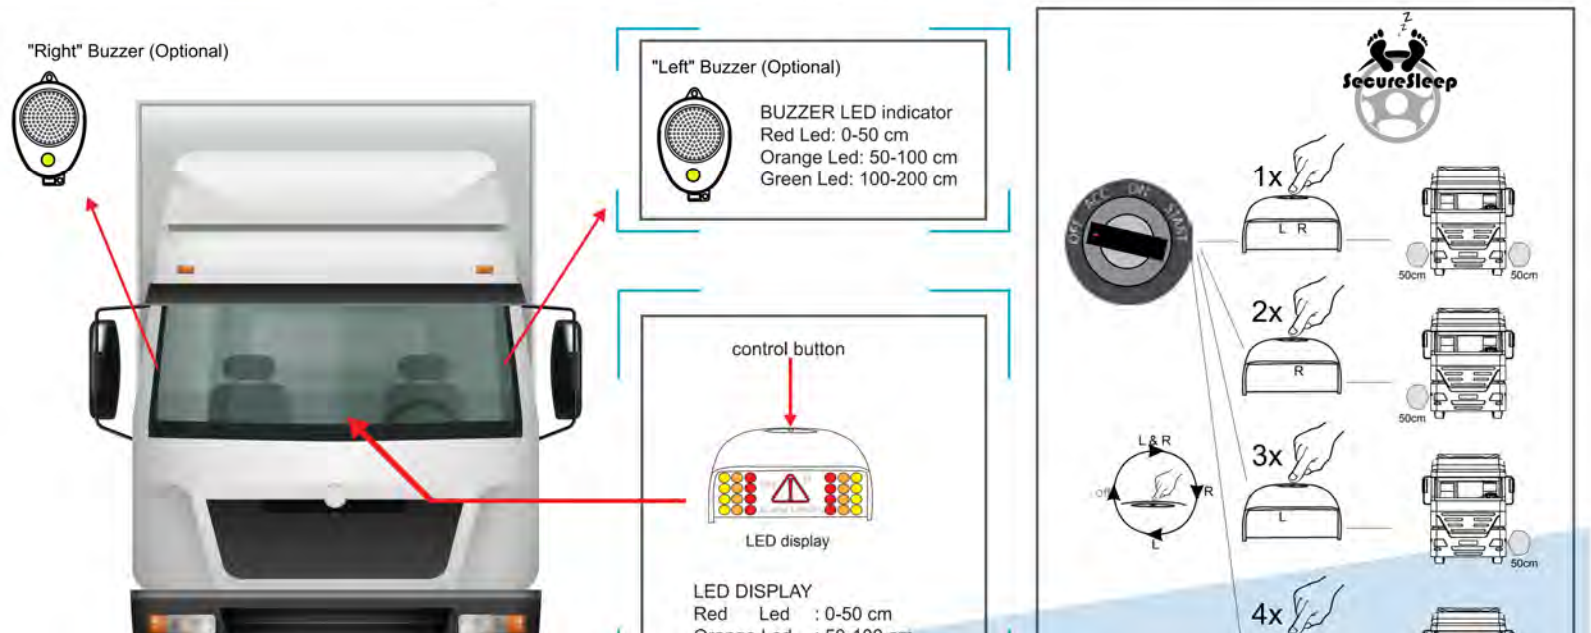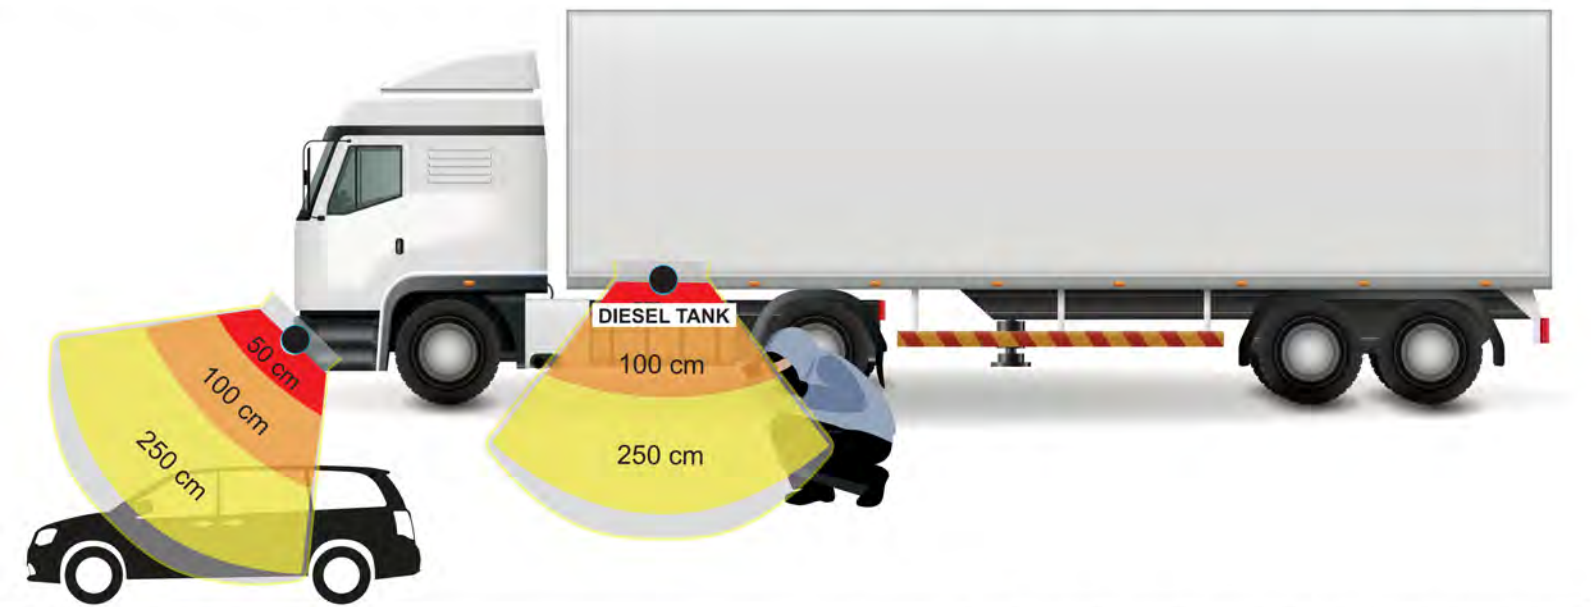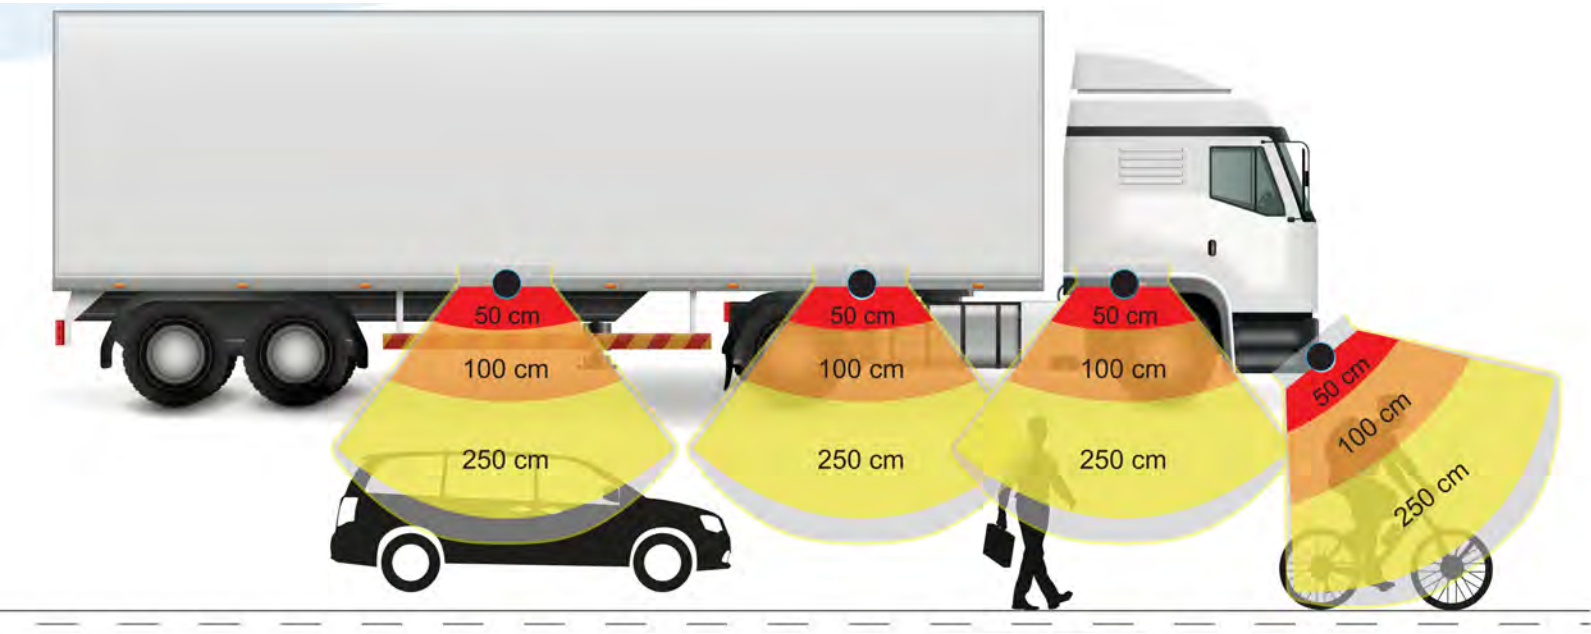

-AUX2: 500 mA gnd output will be activated when system gives buzzer alert during ignition on. It can be used to trigger camera system monitor.

- Brake wire is for models without gps

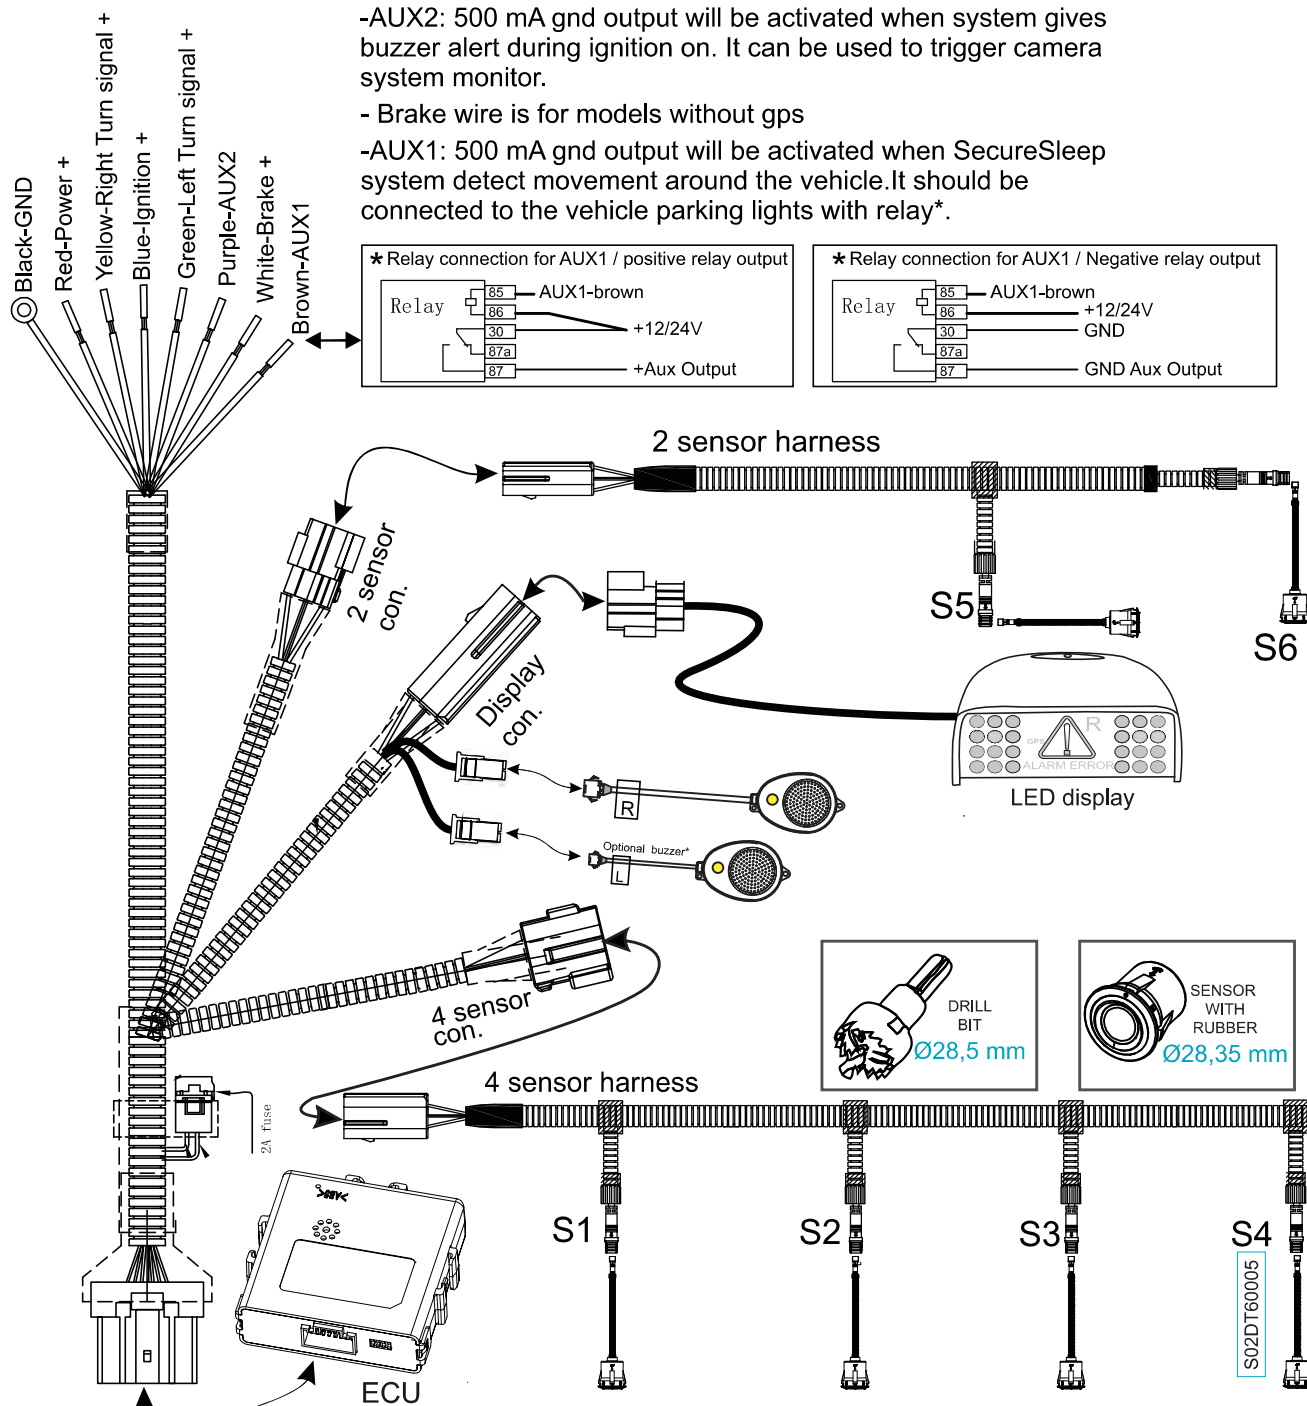



-AUX1: 500 mA gnd output will be activated when SecureSleep system detect movement around the vehicle. It should be connected to the vehicle parking lights with relay*.



Standart set includes:

- 4/6 pcs sensor with rubber
- 1 pc ECU
- 2/3 sets wiring harness
- 1 pc LED display + GPS
- 1 pc 24V relay
- 1 pc Drill Bit Ø28,5

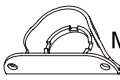Optional Parts

	Metal Bracket for sensor		Left Buzzer
	Sensor extension cable 3m.		Right Buzzer

