

AIR VUE™

Wireless That *ACTUALLY* Works

AV-A17 and AV-WT1

Air Vue™ Advanced

2.4GHz Digital Wireless Monitor, Quad View FHD, Touch Screen, Video Output

Air Vue™

Wireless Transmitter



Instruction Manual

TABLE OF CONTENTS

Introduction	3
In The Box	3
Safety Information	4
Precautions	7
1. Maintenance	8
2. Features and Specifications	9
3. Accessories	10
4. Monitor Parts Identification	11
5. Menu Operation & Functional Specification	12
5.1 IR Remote Control	12
6. System Schematics	14
7. Air Vue™ Advanced - Multi-Camera Monitor Specification	15
8. Air Vue™ - AV-WT1- Transmitter Specification	16
9. RVS-MV3-IR-AHD - Backup Camera Specification	17
10. Wiring instructions when connecting power through running lights	18
11. Trailer Camera/transmitter Cable Routing	19
12. Transmitter Installation	20
13. Transmitter Power Connection	21
14. Menu Operation	22
14.1 Desktop	22
14.2 Home Menu	24
14.3 VOL (Volume)	24
14.4 BRT (Brightness)	24
14.5 PAIR	25
14.6 TRAILER (Display View)	25
14.6.1 SP (Split Setup)	26
14.7 VIEW	27
14.8 REC (Record)	27
14.9 SYS - Main Menu	27
14.9.1 Camera	28
14.9.1.1 Keyboard (Appears when editing Camera name)	29
14.9.2 Parking Line	30
14.9.2.1 Calibrate	30
14.9.3 Language	31
14.9.4 Trigger	32
14.9.4.1 Input panel	33
14.9.4.2 Priority	33
14.9.5 Auto Scan	34
14.9.6 Power On	35
14.9.7 Standard	36
14.9.7.1 Channel Video Standard	37
14.9.8 CVBS Mode (Video Output)	37
14.9.9 Disk	38
14.9.10 Record Setting	38
14.9.11 System	38
14.10 Auto Dimmer	40
15 Wireless Channel Display	40
16. Troubleshooting	43
Warranty	44
Disclaimer	45

INTRODUCTION

Congratulations on purchasing an Air Vue™ Advanced Wireless Monitor! With this manual, you can properly install and operate the unit. The wireless monitor is intended to be installed as a supplemental aid to the standard rear-view mirror that already exists in your vehicle. The monitor should not be used as a substitute for your vehicle's standard rear-view mirror or any other mirror. In some jurisdictions, it is unlawful for a person to drive a motor vehicle equipped with a TV viewer or screen in front of the driver's seat or any location visible, directly or indirectly, to the driver while operating the vehicle.

Please read all of the installation instructions carefully before installing the product. Improper installation will void manufacturer's warranty.

IN THE BOX

- 1 x Monitor
- 1 x Antenna
- 1 x Fan Bracket
- 1 x U Bracket
- 1 x Sun Shade
- 1 x Remote Control
- 1 x Monitor Power Harness



SAFETY INFORMATION

PLEASE READ THE ENTIRE MANUAL AND FOLLOW THE INSTRUCTIONS AND WARNINGS CAREFULLY. FAILURE TO DO SO CAN CAUSE SERIOUS DAMAGE AND/OR INJURY, INCLUDING LOSS OF LIFE. BE SURE TO OBEY ALL APPLICABLE LOCAL TRAFFIC AND MOTOR VEHICLE REGULATIONS AS IT PERTAINS TO THIS PRODUCT. IMPROPER INSTALLATION WILL VOID MANUFACTURER'S WARRANTY.

USAGE : The Rear View Camera System is designed to help the driver safely detect people and/or objects helping to avoid damage or injury. However, you the driver, must use it properly. Use of this system is not a substitute for safe, proper or legal driving.

- Never back up while looking at the monitor alone. You should always check behind and around the vehicle when backing up, in the same way as you would if the vehicle did not have the Rear View Camera System. If you back up while looking only at the monitor, you may cause damage or injury. Always back up slowly.
- The Rear View Camera System is not intended for use during extensive back-up maneuvers or backing into cross traffic or pedestrian walkways.
- Please, always remember, the area displayed by the Rear View Camera System is limited. It does not display the entire panorama that is behind you.

SAFETY INFORMATION

INSTALLATION

Electric shock or product malfunction may occur if this product is installed incorrectly.

- Use this product within the voltage range specified. Failure to do so can cause electronic shock or product malfunction.
- Take special care when cleaning the monitor.
- Make sure to firmly affix the product before use.
- If smoke or a burning smell is detected, disconnect the system immediately.
- Where the power cable may touch a metal case, cover the cable with a friction tape. A short circuit or disconnected wire may cause a fire.
- While installing the RVS System be careful with the wire positioning in order to avoid wire damage.
- Do not watch movies or operate the monitor while driving; as it may cause an accident.
- Do not install the monitor where it may obstruct drivers view or obstruct an air bag device.
- Dropping the unit may cause possible mechanical failure.
- When in reverse, monitor buttons are not functional



A Safe Fleet Brand

If you have questions about this product,
please contact us at:

800.764.1028 RVS.Sales@safefleet.nett
www.rearviewsafety.com

New York

1797 Atlantic Ave
Brooklyn, NY 11233

Indiana

319 Roske Dr.
Elkhart, Indiana 46516

Canada

68 Trafalgar Square
Thornhill, ON, L4J 7M5, Canada

**IN NO EVENT SHALL SELLER OR MANUFACTURER BE
LIABLE FOR ANY DIRECT OR CONSEQUENTIAL DAMAGES OF
ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM
ANY DEFECTIVE PRODUCT OR THE USE OF ANY PRODUCT.**

PRECAUTIONS

1. Do not expose the monitor to excessive heat or coldness. Storage temperature is -30~+80°C; Operating temperature is -20~+70°C; with a maximum relative humidity of 90%.
2. Never use this device near a bathtub, wash basin, kitchen, damp basement, swimming pool or similar places.
3. Never use this device in the environment with excessive moisture, dust or smoke.
4. Avoid dropping or striking.
5. Never use this device in enclosed spaces, areas with excessive vibration or subject to severe impacts.
6. Never puncture, scratch, or use abrasive cleaning materials on this device.
7. Do not place cables where they may be pinched or stepped on.
8. Leave at least a 2" space between the monitor and walls, glass or other objects to allow adequate air circulation around the device.
9. This monitor is not designed to be waterproof.

Operating Precautions

1. The device may be powered by a 12 or 24 volt automotive battery or vehicle electrical system.
2. Make sure all cables are correctly connected. Observe polarity. Improper cable connections may damage the monitor. Remove the power cable connections when you do not intend to use the device.





1. High voltage is present within the monitor. Opening monitor case should only be performed by professionals.
2. Do not watch any video while driving unless you are monitoring rear view camera display.



Occasionally, a few highlights or dark spots may occur on the LCD screen. That is a very common phenomenon in active matrix display technology, and it doesn't necessarily indicate any defects or faults.

1. MAINTENANCE

1. Remove all the cable connections from the monitor before cleaning the device.
2. Use a mild household detergent and clean the unit with a slightly damp, soft cloth.
3. Never use strong solvents such as thinner or benzine, as they might damage the finish of the device.

	Caution	
	Risk of electric shock Do not open	
Caution: to reduce the risk of electric shock, Do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.		



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This symbol is intended to alert the user not to dispose of electrical and electronic equipment.

CAUTION

Any changes or modifications not expressly approved in this manual could void your warranty and may necessitate expensive repairs.

2. FEATURES AND SPECIFICATIONS

1. 7" HD quad-view monitor and resolution is 1024 x 600.
2. It supports three wired HD camera inputs + 1 wireless camera input and supports multiple view displays.
3. Multiple video formats available: 1080P30/1080P25/720P30/720P25/PAL/NTSC.
4. Single, dual, triplex, quad, trefoil, Y-split, and PIP view display modes are available.
5. Each channel supports independent image adjustment for horizontal-mirror vertical-mirror view display.
6. Support capacitive touch screen with gesture detection; iconic menu operation.
7. Support remote operation.
8. Support five trigger lines; the first four can be triggered to display the corresponding camera channel; trigger delay and priority are adjustable
9. Trigger the 5th trigger line to enable the radar to operate.
10. Support auto scanning, with scanning sequence and hold time editable.
11. Adjustable parking lines are available.
12. Support 60-level manual adjustment with high/low sensitivity selectable and 2-level automatic adjustment of the LCD backlight.
13. Multiple languages are available (English, French, Spanish, Netherlands, Italian, German, Russian, Portuguese, Polish, Turkish, Japanese, Chinese).
14. With 1.5W speaker.
15. Wide voltage input: 10 ~ 32V; Supports 12V or 24V automobile battery with short circuit protection.
16. Easy installation and convenient operation, with innovative functions.
17. Applicable to indoor/outdoor security systems, vehicle and ship surveillance.
18. Compliance with CE/FCC standards.

NOTE: Accessory supply may vary due to features.

3. ACCESSORIES



U-Bracket



Fan Bracket



Sun Shield



Power Harness




Angle Adjustment Screws




IR Remote Control

SPECIAL NOTICE: Accessory supply may be different for different applications.

4. MONITOR PARTS IDENTIFICATION

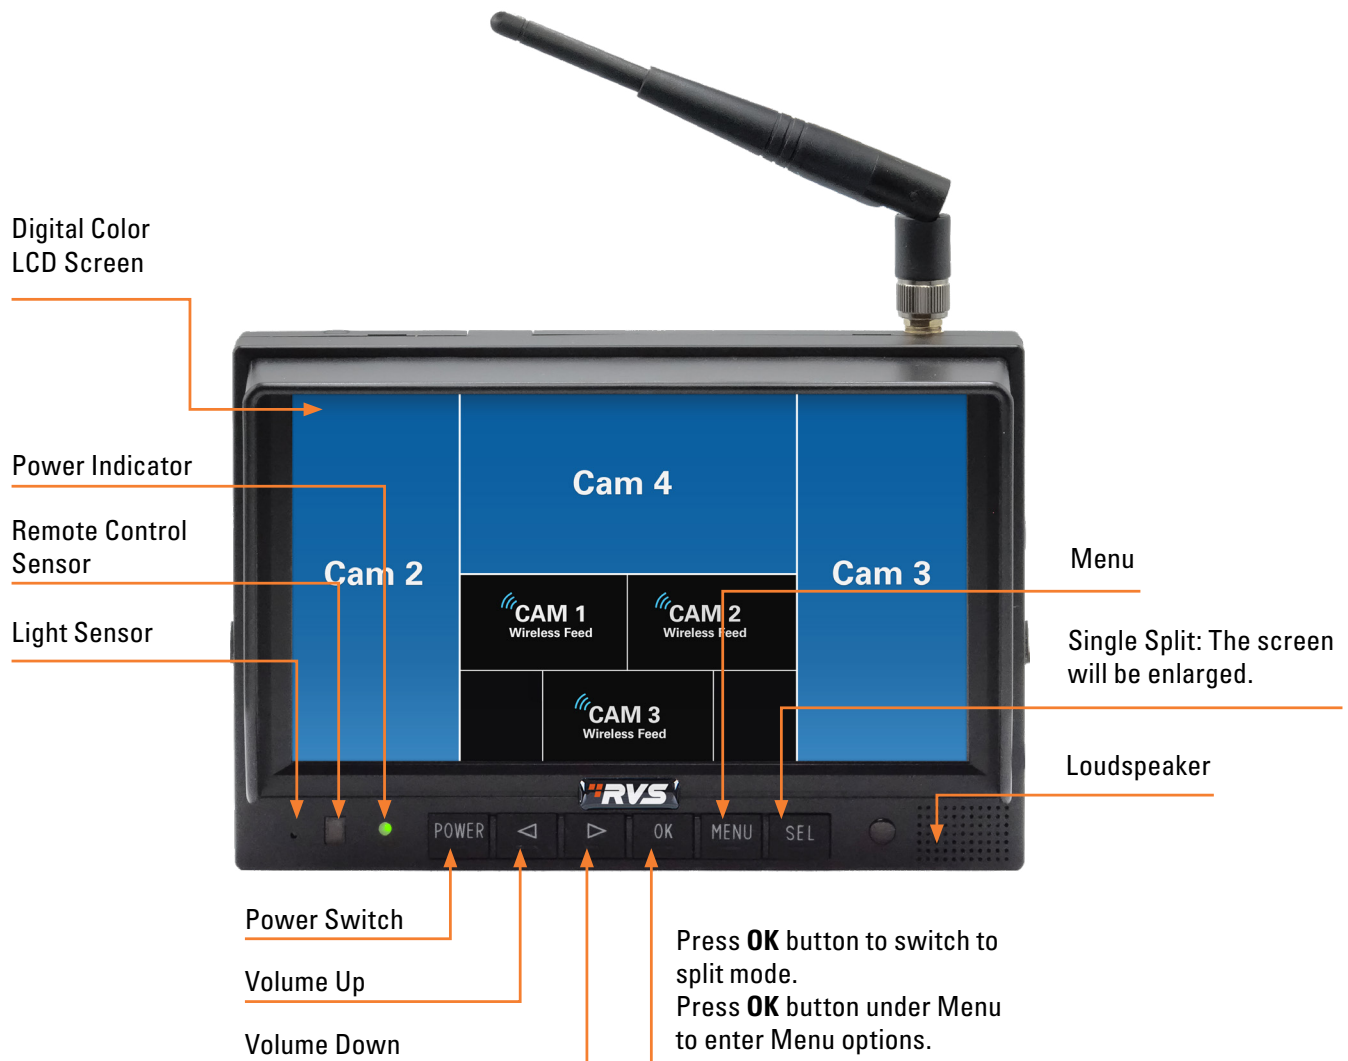


5. CONNECTIONS

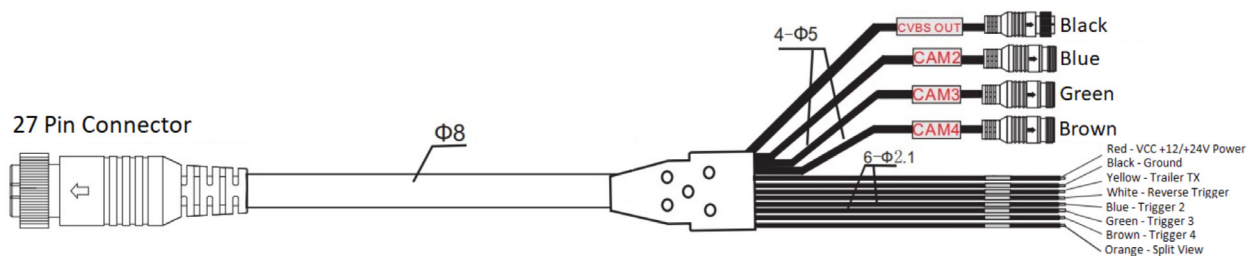

1. Black 4P female for CVBS outputs.
2. Blue 4P male for Camera 2.
3. Green 4P male for Camera 3.
4. Brown 4P male for Camera 4.
5. **Single red wire to battery powered circuit DC: 10~32V.**
6. **Single black wire to GND.**
7. Single white reverse trigger
8. Single blue wire to trigger Camera 2.
9. Single green wire to trigger Camera 3.
10. Single brown wire to trigger Camera 4.
11. **Single yellow wire to wireless transmitter camera circuit.**

5. MENU OPERATION & FUNCTIONAL SPECIFICATION

5.1 REMOTE CONTROL

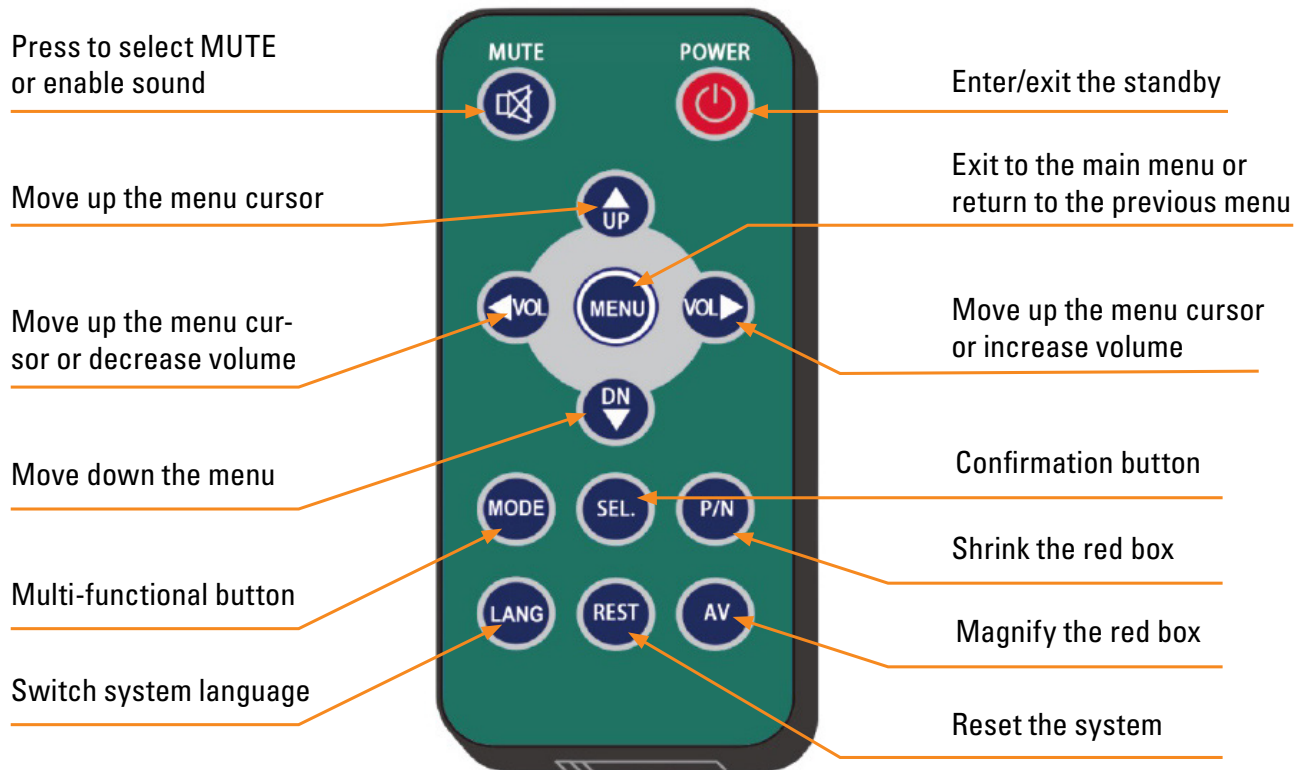

- **MUTE:**
Mute or unmute the monitor, and open the volume adjustment menu.
- **Power:**
Enter or exit the standby mode.
- **VOL ▷ :**
Open the volume adjustment menu;
Move the red box in the magnified mode;
Move the displayed place of the magnified image;
Move the menu cursor.
- **VOL ◁ :**
Open the volume adjustment menu;
Move the red box in the magnified mode;
Move the displayed place of the magnified image;
Move the menu cursor.

- **UP:**
Switch the channel without auto scan and trigger function turned on;
Move the red box in the magnified mode;
Move the displayed place of the magnified image.

- **DOWN:**
Switch the channel without special mode such as auto scan and trigger function turned on;
Move the red box in the magnified mode;
Move the displayed place of the magnified image.

- **P/N:**
Shrink the red box if the red box is shown in the magnified mode.

- **LANG:**
Switch to different languages on some menus.

- **REST:**
Reset the system.


- **AV:**
Magnify the red box if the red box is shown in the magnified mode.

- **SEL:**
Enter the menu which the cursor selects;
Show/hide a red box to magnify the displayed area when in single view display mode and without special mode such as auto scan or trigger function turned on;
Magnify the image to full screen when the red box is shown in the magnified mode.

- **MENU:**
Exit to the main menu or return to the previous menu;
Return the magnified image to normal size when the green box is shown in the magnified mode.

6. SYSTEM SCHEMATICS

The closer the connection point to the rear J-560 7-Way Plug the more reliable the pairing signal will be with the trailer transmitter.

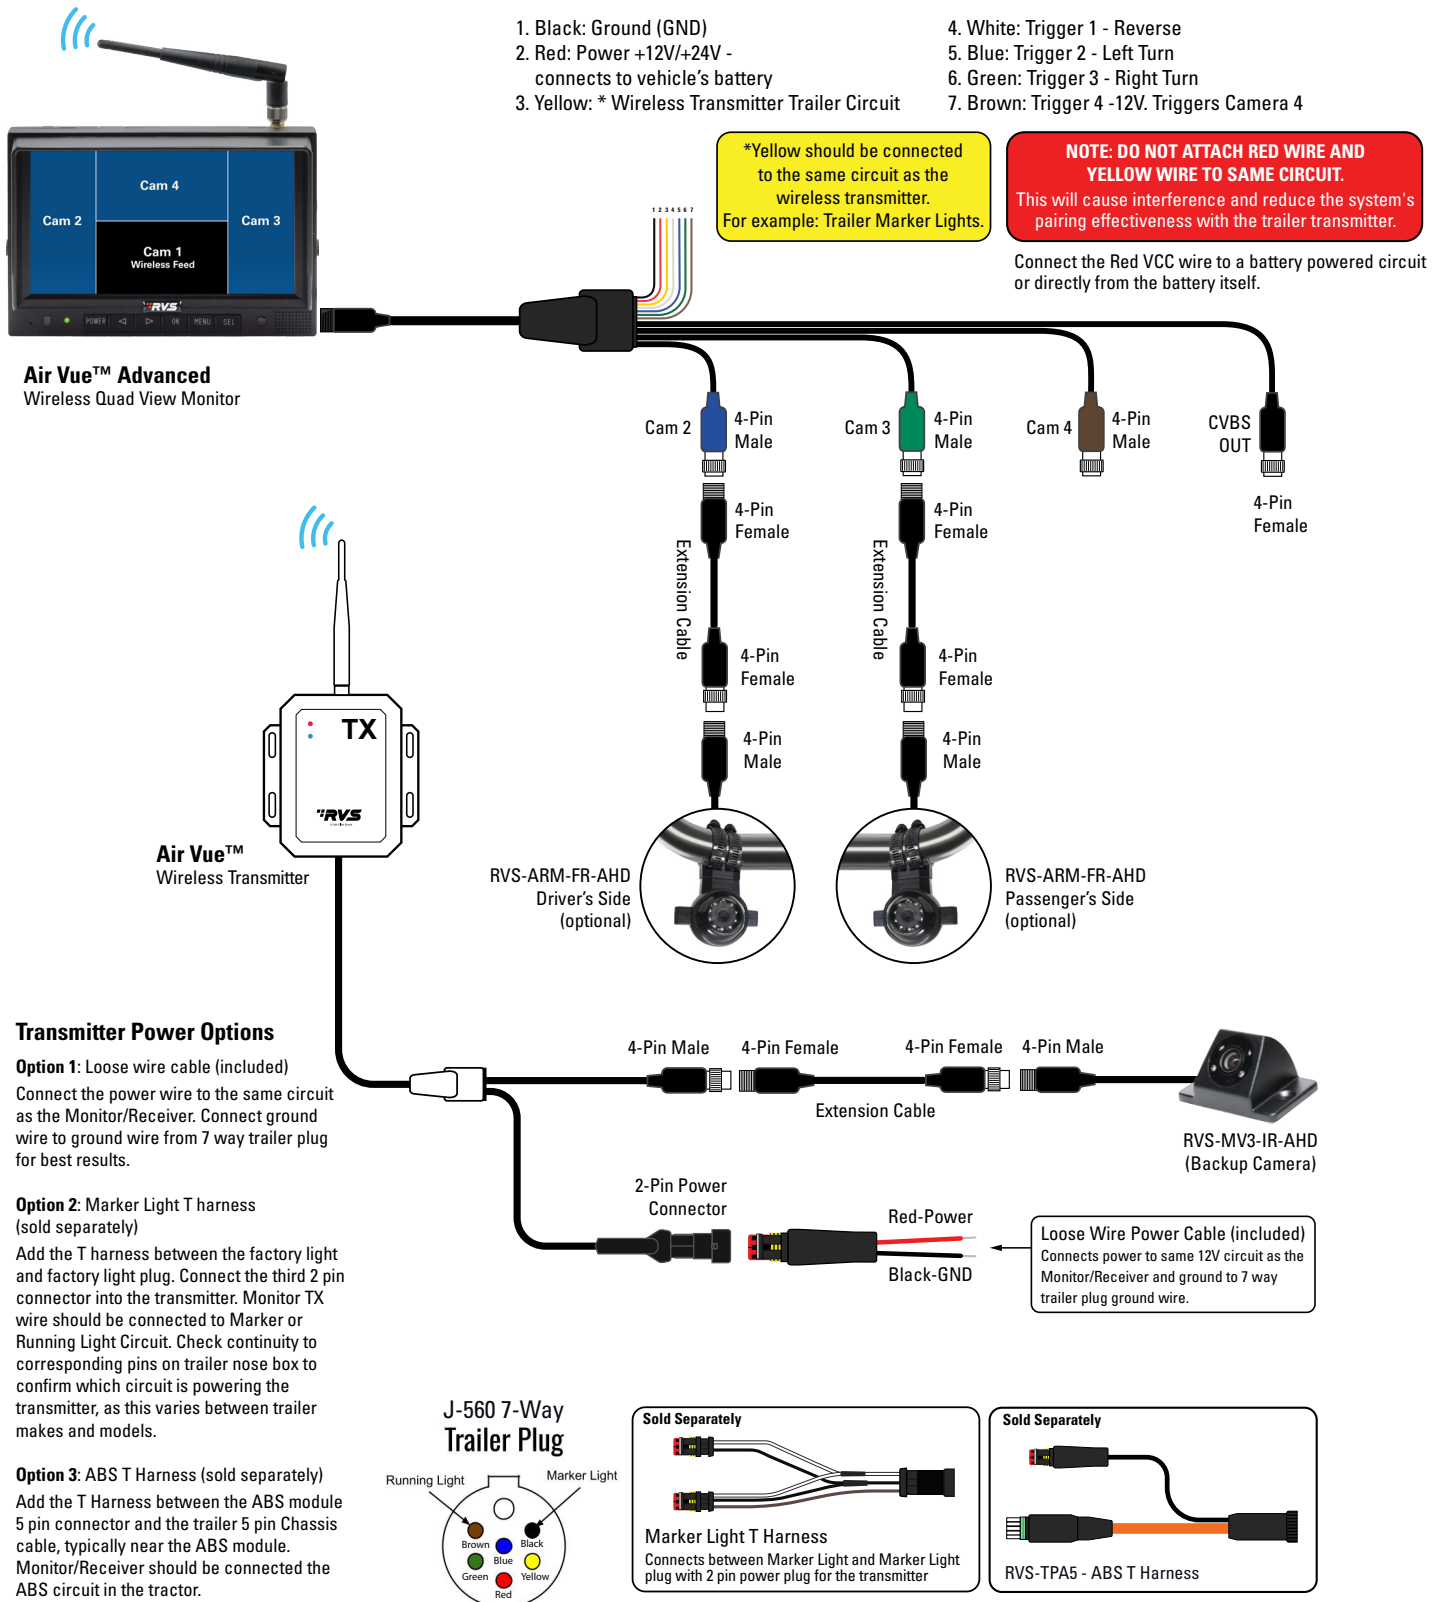

7. AIR VUE™ ADVANCED - MULTI-CAMERA MONITOR SPECIFICATION



Features	
1	3 camera inputs with different resolution (1080P, 720P, CVBS 480P). NTSC or PAL supported. @30 FPS or 25 FPS
2	Supports up to 3 wireless transmitter inputs (shown in single channel)
3	Multiple video input formats available: 1080P30/1080P25/720P30/720P25/480P30/480P25
4	Single, dual, triplex, quad, trefoil, Y-split image and PIP display
5	Touch screen, Multi-languages menu
6	Adjustable parking lines
7	Five trigger lines and trigger priority
8	Support AUTO SCAN, with scan channel and time selectable
9	60-level manual adjustment with high/low sensitivity selectable, and 2-level automatic adjustment of LCD backlight;
10	Image adjustable for horizontal, vertical, horizontal - vertical viewing
11	Wide voltage input: 10 - 32V
12	Remote control
13	Operation frequency - 2400 - 2483.5 MHz (ISM band)

Monitor Specification	
LCD size	7"
Resolution	1024 x 3 (RGB) x 600
Dot pitch	0.1506(H) x 0.1432 (V)
Contrast	700:1
Brightness	600 cd/m ²
Viewing angle	U: 85° / D: 85°, R/L: 85° / 85°
Video inputs	4 camera video inputs (including 1 wireless channel)
Video output	CVBS output
Audio input	4 Camera Audio inputs (including 1 wireless)
Audio output	1 camera output, (mix audio output is optional - max. 4 camera audio feeds can be played simultaneously via one audio output)
Power inputs	vehicle's battery (10-32V)
Power consumption	Max 25W
Operating temperature	-20~+70°C, RH 90%
Storage temperature	-30~+80°C, RH 90%
Dimension	188mm (W) x 122mm (H) x 29mm (D) ~ 7.4" x 4.8" x 1.15"
Weight	1.60 kg/3.53LB

8. AIR VUE™ - AV-WT1- TRANSMITTER SPECIFICATION



Transmitter Specification	
Power supply	DC 10-32V
Water Resistance	IP69K
Video input	AHD720P / AHD1080P
Video Compression	H.264
Operation frequency	2400 - 2483.5 MHz (ISM band)
Modulation	QPSK
RF Bit Rate	6Mbps
Spread spectrum	FHSS
Transmitter Power	FCC < 26 dBm, CE < 20 dBm, MIC < 10 dBm
Receiving Sensitivity	-78dBm
Transmission Range	FCC < 300 m, CE < 200 m, MIC < 60 m
Active area	154.08(H) × 85.92(V) mm
Signal delay	< 200ms
Operating Temperature	-20 ~ +70°C RH90%
Storing Temperature	-30 ~ +80°C RH90%

9. RVS-MV3-IR-AHD - BACKUP CAMERA SPECIFICATION



Camera Specification	
Camera	Camera PC 3089
Resolution	1080P
Lens	Lens 2.1mm
Viewing Angle	170°
Night Vision	Yes - Infra-red Lights
S/N Ratio	More than 48dB
Waterproof Rating	IP68
Max Frame Rate	NTSC: 60 fields/sec, PAL: 50 fields/sec
Sync System	Internal Synchronization
Power Source	DC 12V
Operating Temperature	-40°C ~ +75°C
Storage Temperature	-40°C ~ +80°C

10. WIRING INSTRUCTIONS WHEN CONNECTING POWER THROUGH RUNNING LIGHTS


Connect all cameras to their respective monitor connection:

Camera 1 will always be the wireless channel. See wiring diagram for recommended camera connections for side and auxiliary cameras.

Wire Connections:

- On the monitor power harness, the Red VCC wire will be connected to a constant vehicle battery powered circuit or directly from the battery itself.
- The Yellow 'Trailer TX' wire will be connected to the same electrical circuit as the trailer wireless transmitter. For example: Brown Wire - Trailer marker lights. The closer the connection point to the rear J-560 7-Way plug the more reliable the pairing signal will be with the trailer transmitter. This can often be found in the engine compartment before going into a fuse block or somewhere in the cab between the tractor J-560 7-Way connector and the interior fuse block.
- The Black ground wire should be connected to the trailer ground circuit if possible. The closer the ground connection point to the rear J-560 7-Way plug the more reliable the pairing signal will be with the trailer transmitter.
- Some vehicles may be able to use a connection point inside the main vehicle fuse panel for the specific trailer circuit and have a reliable connection with the trailer transmitter. This may not be a viable solution for certain vehicles depending on the electrical architecture of the vehicle (i.e. a more complex connection path may cause a reduction in pairing signal strength to the trailer transmitter).

11. TRAILER CAMERA/TRANSMITTER CABLE ROUTING

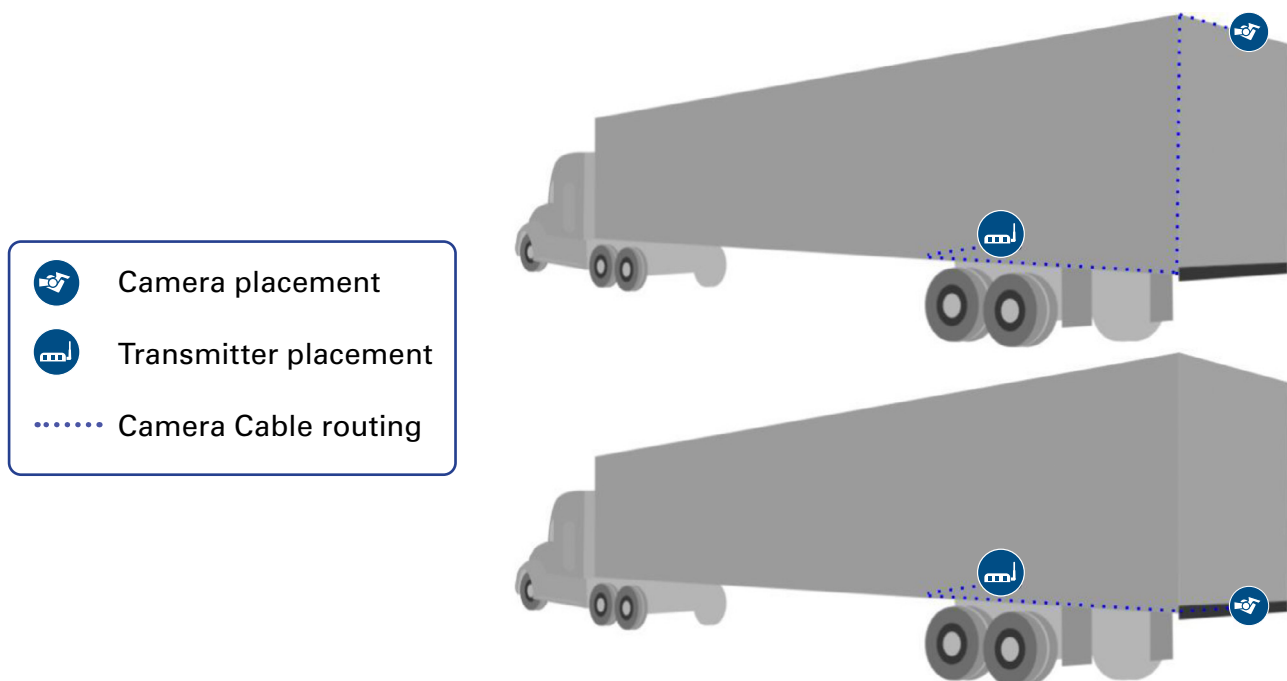

10.1. MONITOR WIRING DIAGRAM

Air Vue™ Advanced (Wireless Quad View Monitor)




- 1. Black: Ground (GND)
- 2. Red: Power +12V/+24V - connects to vehicle's battery
- 3. Yellow: * Wireless Transmitter Trailer Circuit

- 4. White: Trigger 1 - Reverse
- 5. Blue: Trigger 2 - Left Turn
- 6. Green: Trigger 3 - Right Turn
- 7. Brown: Trigger 4 - Triggers Camera 4
- 8. Orange: Trigger 5 - Split (Custom Trigger)

*Yellow should be connected to the same circuit as the wireless transmitter. For example: Trailer Marker Lights.


NOTE: DO NOT ATTACH RED WIRE AND YELLOW WIRE TO SAME CIRCUIT. This will cause interference and reduce the system's pairing effectiveness with the trailer transmitter.

Connect the Red VCC wire to a battery powered circuit or directly from the battery itself.

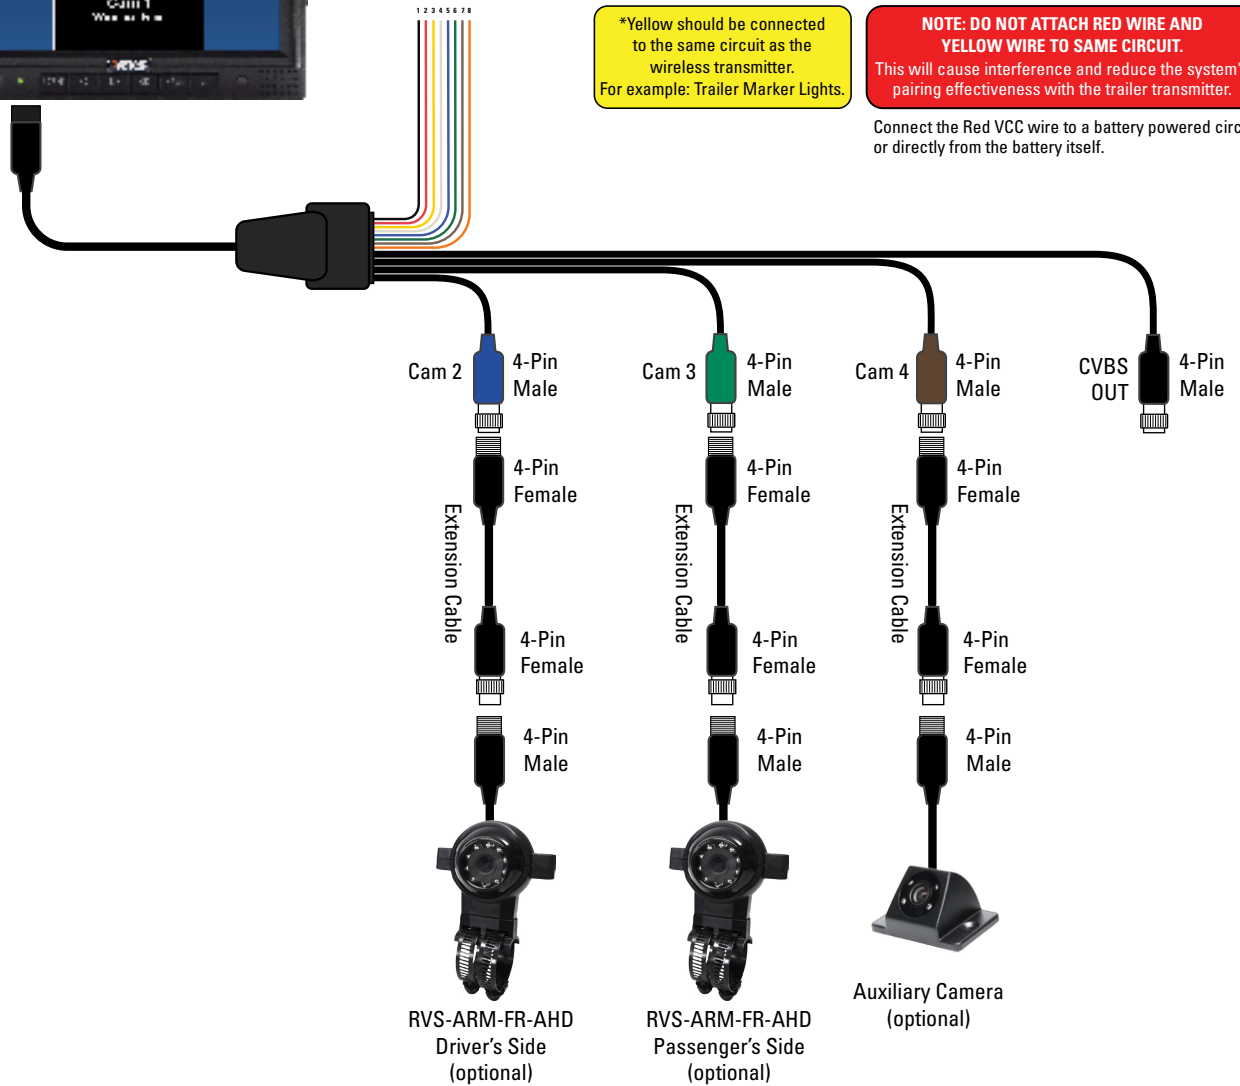

12. TRANSMITTER INSTALLATION

- Identify where you will be making your power connection to the Trailer Running Light Circuit (recommendations on the next page).
- Find a suitable location for the Transmitter to be mounted with either screws or nuts and bolts. This can be behind or in front of the sliding axle, depending on power connection location.
- When evaluating a mounting location, avoid areas of the trailer that would “enclose” the transmitter.
- Secure the camera cable and power harness with zip ties to existing cabling or P-clamps if there are areas with no existing wiring.
- If it’s not already, align the antenna to be parallel with the trailer axle for the best results.

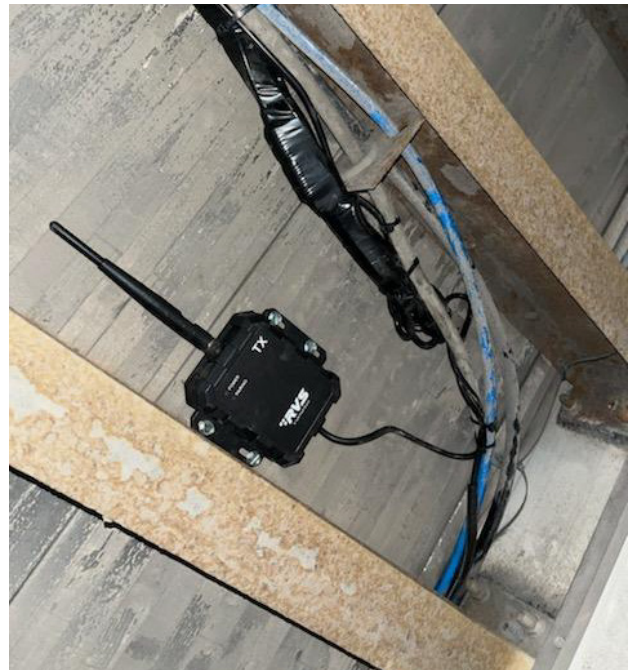


13. TRANSMITTER POWER CONNECTION



- Using the supplied power harness, connected the Red and Black wires to Trailer light circuit and ground respectively.
- Trailer Running Light circuit can be spliced into at the two locations circled above.
- Be sure to secure and cover connections so that they do not corrode in the elements.
- Trailer Light Running circuit should be 12V+ when the running lights are ON and 0V when the lights are not activated.


14. MENU OPERATION

14.1 DESKTOP

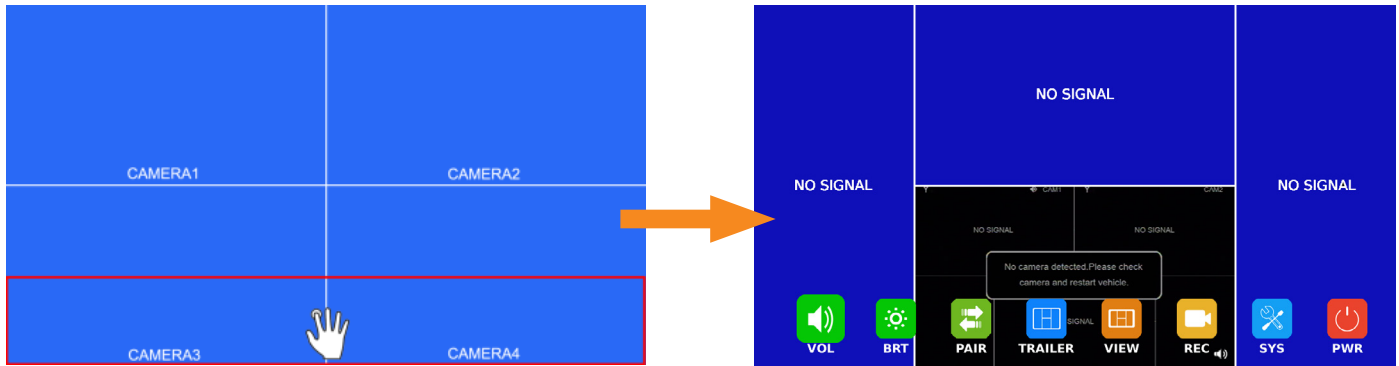


Touch Screen Instructions:

- Click the area in the red box as the pic above to open home menu.

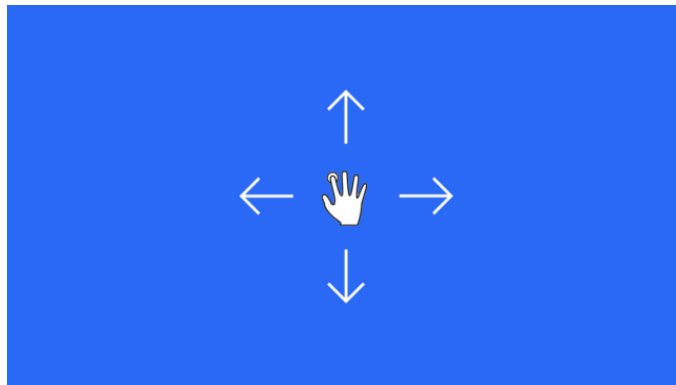


- Without special mode such as auto scan or trigger function turned on, the swiping to the left and right of the touch screen can switch the display mode following the order: CAM1->CAM2->CAM3->CAM4->DUAL->TRIPLE->TREFOIL->Y-SPLIT->H.SPLIT->QUAD->PIP1->PIP2->PIP3->SP->CAM1.
- Support swiping up/down to exit/enter the standby mode.

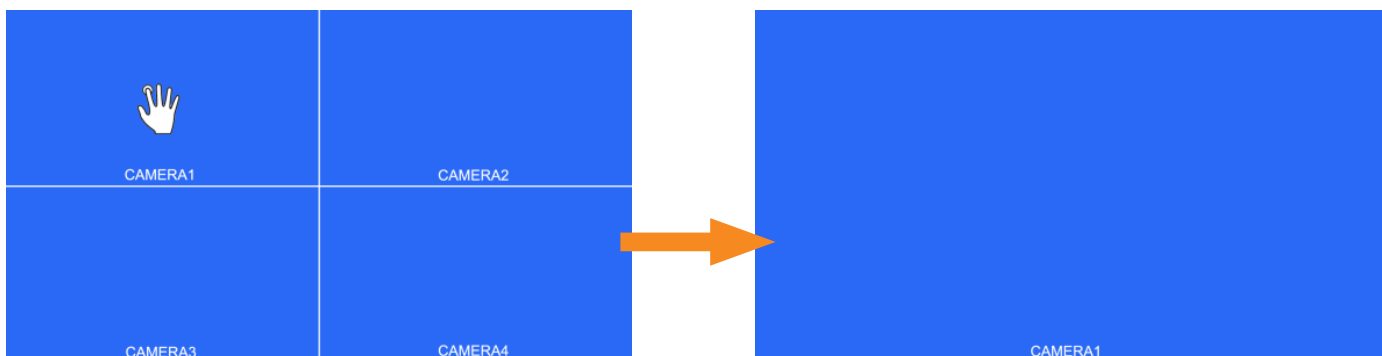

- Without special mode such as auto scan or trigger function turned on, and when in split view display (not PIP1/2/3 or SP), single touch one of the channel to enter single view display of the channel, and touch again to enter split view.
- Without special mode such as auto scan or trigger function turned on, and when it's split view display (not PIP1/2/3 or SP), double touch different channels will pop up a green semitransparent box, and when the fingers leave the screen, the two channels will exchange the position. If the channel that you want for exchange is not displayed, you may move the touch point to the top of the screen, and the hidden channel will show up.
- Without special mode such as auto scan or trigger function turned on, and when it's split view display (not PIP1/2/3 or SP), double touch same channels will pop up a red semitransparent box for choosing audio output channel.
- Without special mode such as auto scan or trigger function turned on, without menu, and when in single view display, double touch the screen to pop up the red box, increase or shorten the distance between the two points to enlarge/shrink the red box.
- Click the area inside the red box to magnify the selected area. When entering the amplified image, the single point dragging can move the image. Single click the magnified image to go back to the normal size. Click the area outside the red box to exit the magnified mode.


14.2 HOME MENU

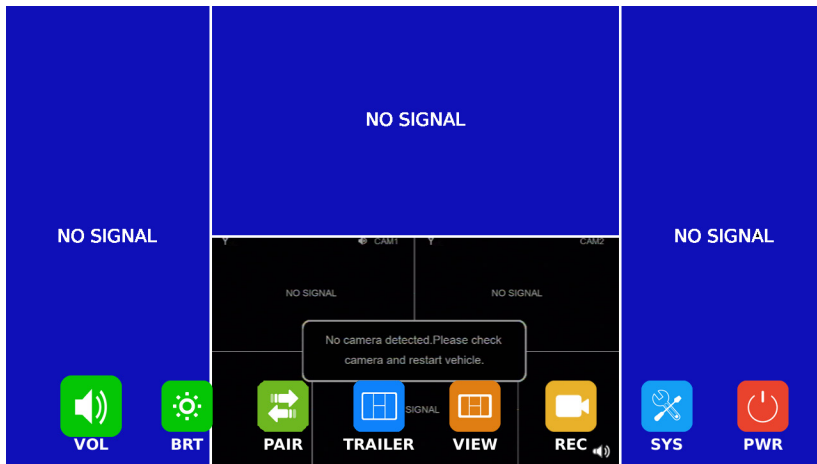

Touch Screen Instructions:

- Click the icon to enter the corresponding menu. Click the area outside the white box to exit home menu.
- Default Password: The default password for the system is: 88888888

14.3 VOLUME (VOL)

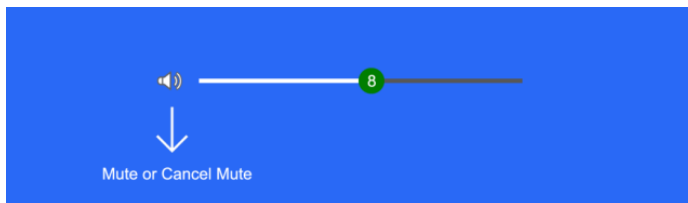

Touch Screen Instructions:

- Touch and drag the volume scroll bar to adjust the volume.
- Click the speaker icon to enter/exit the mute mode.

Other Instructions:

- When under mute mode, the operation of scroll bar adjustment will cancel the mute.

14.4 BRIGHTNESS (BRT)

When auto dim is off:




When auto dim is on:




Touch Screen Instructions:

- Drag the brightness scroll bar to adjust the brightness.

Other Instructions:


: Brightness in the day.

: Brightness at night.


14.5 PAIR

Force the monitor to restart the pairing process with the trailer's wireless transmitter.

14.6 DISPLAY VIEW (TRAILER)

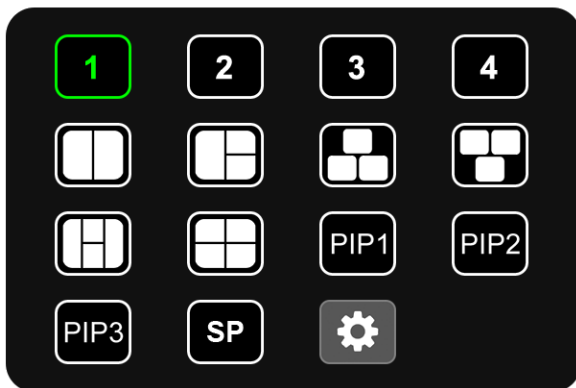


Touch Screen Instructions:

- Click the icon to switch to the corresponding display mode; if the icon  is selected, enter Split Setup menu when in split-view display mode.
- Click the area outside the menu to exit.

14.6.1 SPLIT SETUP (SP)

SP

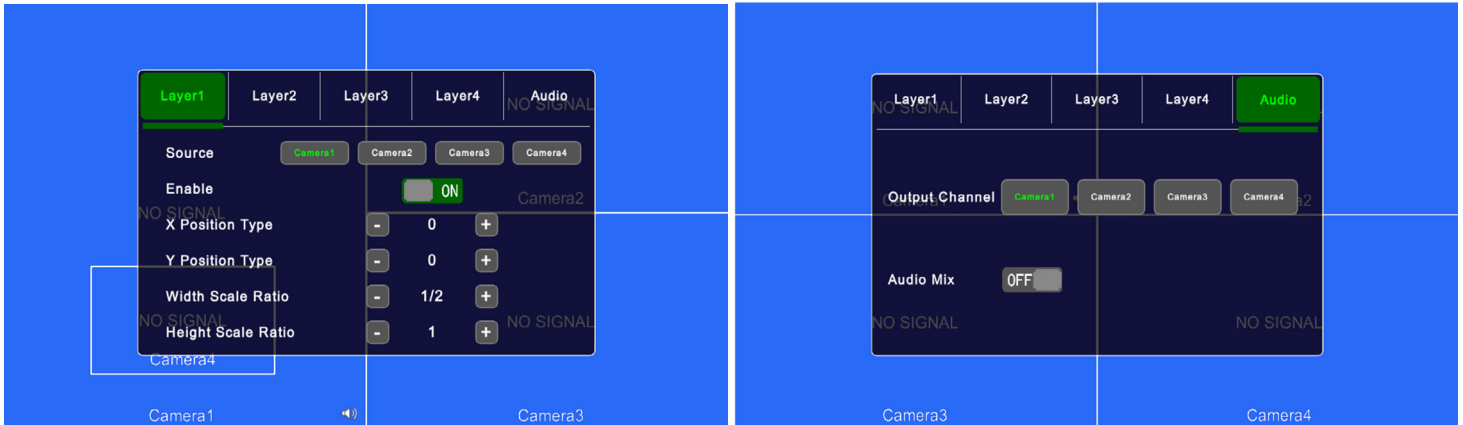

Touch Screen Instructions:

- Click Layer 1-4/Audio icon to switch the page.
- When setting up Layer 1-4: click the bottom setting to adjust the position and size of the screen display or whether to turn on this layer.
- Set Audio mix status in Audio menu setting. Turn on/off the audio mix mode and select audio output channels. Multiple audio output channels can be selected when set ON. No audio output available when none of these channels is selected.

Remote Instructions:

- LANG: Switch system language.
- UP / DOWN: Cursor switch.
- SEL: Select the camera channel and audio output channel.


Features instructions:

- Source: The camera channel being displayed of the layer.
- Enable: If the layer is displayed.

The following features are only available when in PIP1/2/3 or SP view display mode. Specially, when in SP view display mode, the setting uses scroll bars for high precision adjustment:

- Width Scale Ratio: The horizontal down scale ratio of the layer.
- Height Scale Ratio: The vertical down scale ratio of the layer.
- X Position Type: The horizontal position of the layer.
- Y Position Type: The vertical position of the layer.
- Output Channel: Audio output channel.
- Audio Mix: Audio mix switch.

14.7 VIEW

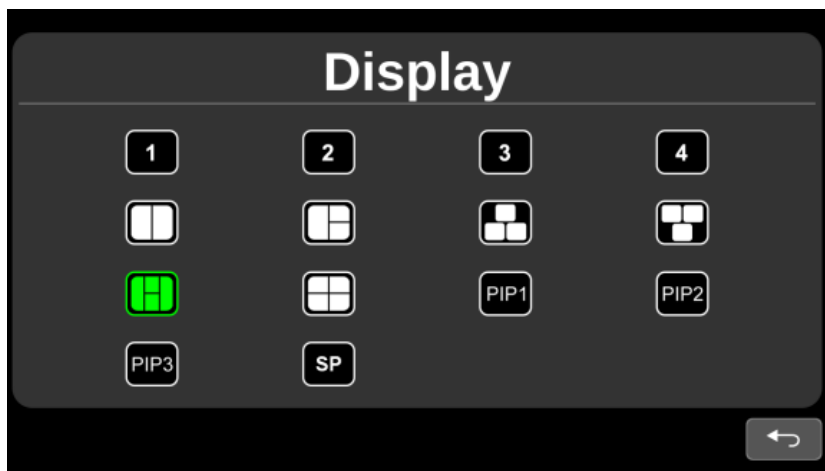


Touch Screen Instructions:

Touch to select preferred image icon and return to previous menu by touching icon  .

14.8 REC

The monitor has automatic recording capabilities. As soon as an SD card is inserted and properly formatted the system will begin to save recorded files. As the SD card fills up, the system will begin to delete the oldest files first before saving new video files. NOTE: The monitor must be powered down prior to removing the SD card. Failure to power down the monitor first may cause video corruption.


14.9 SYS - MAIN MENU

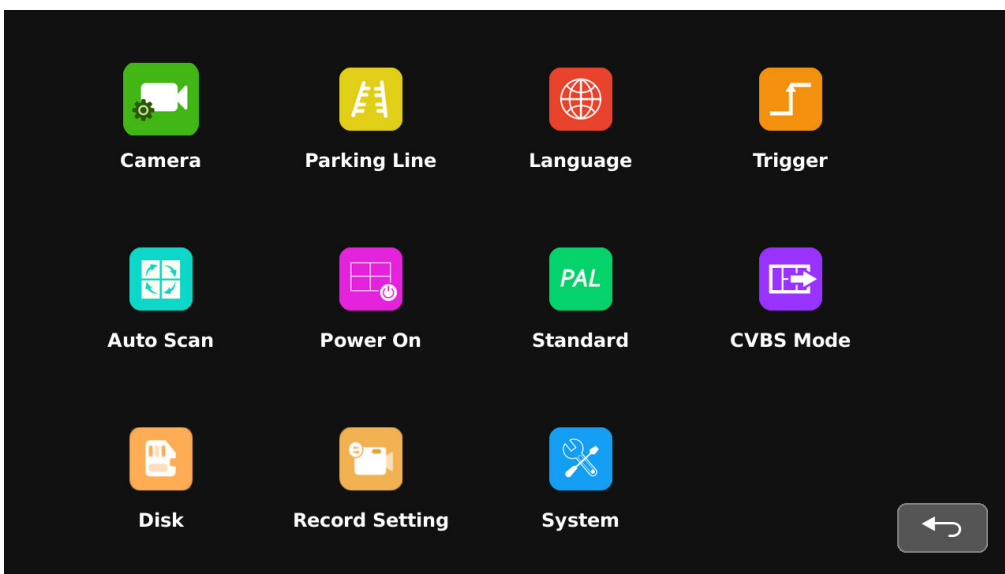


Touch Screen Instructions:

- Click the "SYS" icon to enter the corresponding menu.

14.9.1 CAMERA

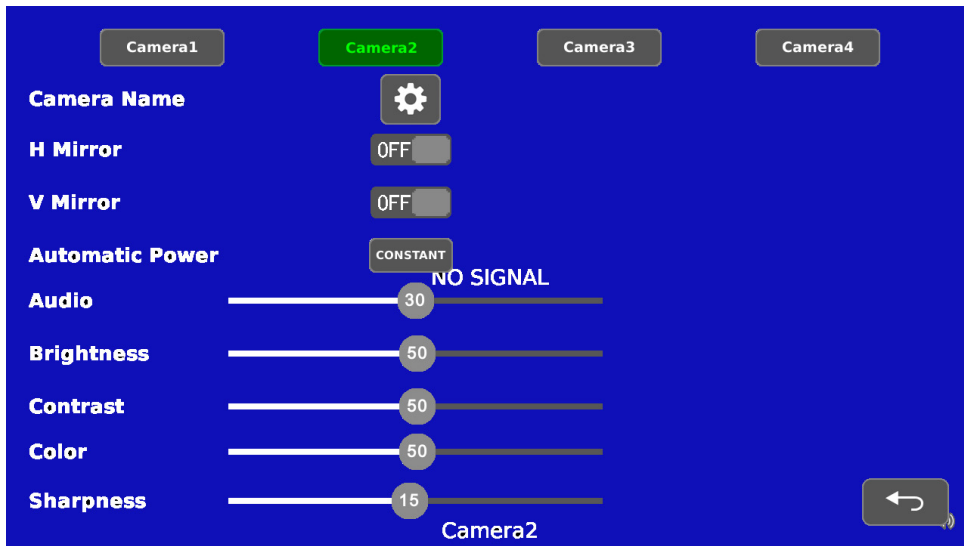

Touch Screen Instructions:

- Click the camera channel icons on the top to show the parameters of the corresponding channel.
- Click the ON/OFF icons or drag the scroll bars to change the features.
- Click the icon  to edit the camera channel name.


Remote Instructions:

- LANG: Switch system language.
- UP / DOWN: Move the menu cursor.

Features Instructions:

- Camera Name: Camera channel name.
- H Mirror: Horizontal mirror.
- V Mirror: Vertical mirror.
- Automatic Power: When it's ON, the cameras will be powered only when displayed. When it's OFF, the cameras will be constantly on except in standby mode. When it's CONSTANT, the cameras will be constantly on even in standby mode.
- Audio: Volume of the camera channel. Each camera channel has its own volume setting (when under mute mode, the operation of Audio adjustment will cancel the mute).
- Brightness: Brightness of the channel.
- Contrast: Contrast of the channel.
- Color: Saturation of the channel.
- Sharpness: Sharpness of the channel.

14.9.1.1 KEYBOARD (APPEARS WHEN EDITING CAMERA NAME)

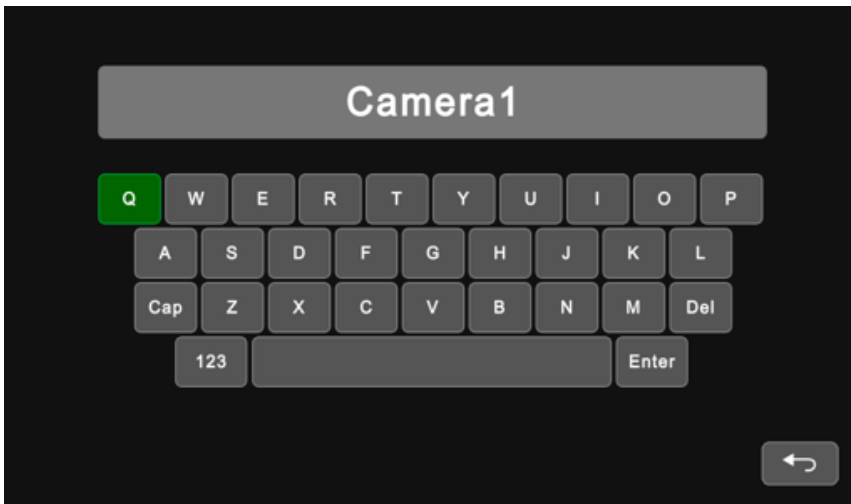

Touch Screen Instructions:

- Click the letter icons to edit the channel name.
- Clicking the letter edit box can move the cursor and change the cursor position

Remote Instructions:

- MODE: Switch the keyboard mode, low-case letters->special numerical character 1->special numerical character 2 -> capital letters -> low-case letters.
- SEL: Click the chosen icon.
- SYS: Delete one character before the cursor in the character edit box.


Other Instructions:

- The following keys are special for:
 - 1) Cap: Switch between capital/low-case letters.
 - 2) 123: Switch to numerical characters.
 - 3) Del: Delete the last letter before the edit box.
 - 4) Enter: Save the revised channel name, and go back to Camera menu.



14.9.2 PARKING LINE



Touch Screen Instructions:

- Click the ON/OFF/AUTO icons to select the display methods of parking lines: AUTO (display when triggered) / ON (constantly on) / OFF. Click the icon  to enter parking lines calibration menu "Calibrate".

14.9.2.1 CALIBRATE

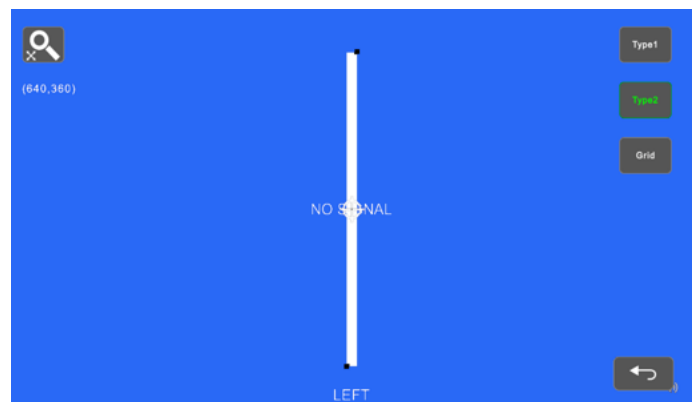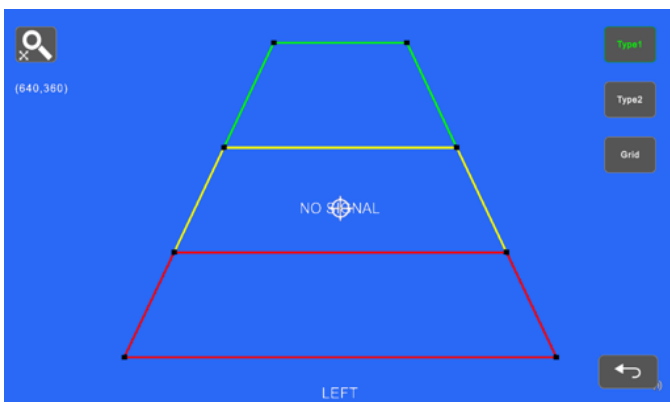

Touch Screen Instructions:

- Drag the black vertexes of the parking line to adjust the shape. Drag the area beside the vertexes to move the whole parking line.
- Use double touch to enlarge or lessen the whole parking line.

- Tapping the icon on the top left will pop up the reset icon and tap it to resume the default config. Tap TYPE1/2 icon on the top right to switch the parking line types. Tap GRID icon to turn on/off the adjustment assistance grids.

Remote Instructions:

- MODE: Magnify the whole parking lines.
- LANG: Shrink the whole parking lines.
- SEL: Turn on/off adjustment assistance grids.
- P/N: Switch the current focuses.
- SYS: Resume the default config.
- AV: Switch the parking line types.

Other Instructions:

- There will show the coordinate of the current focus on the top left.
- The icon indicates which one the touch operation focuses on.



14.9.3 LANGUAGE



Touch Screen Instructions:

- Touch icons to switch system language.

14.9.4 TRIGGER

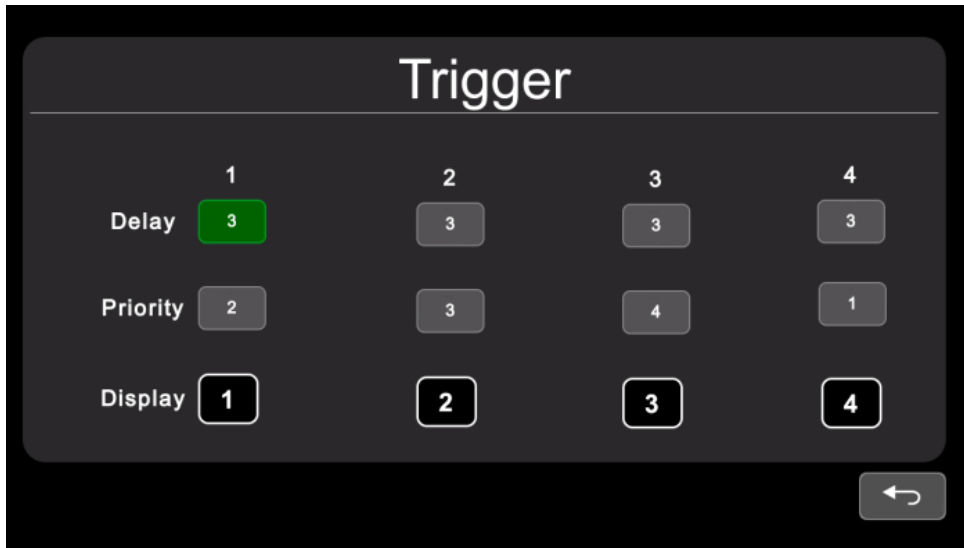

Touch Screen Instructions:

- Touch any of “Delay” line to activate digital input box; Touch any of “Priority” line to activate digital selection box. Touch any of “Display” line to activate interface to select display images.

IR Instructions:

- LANG: Switch system language.


Feature Instructions:

- Delay: Trigger display image duration after trigger signal is disappeared, ranging from 0 to 60 seconds.
- Priority: Settings of trigger priorities. Trigger in higher priority can interrupt lower priority trigger. The range of the priorities is 1 to 4. The smaller the number, the higher the priority.
- Display: Settings of corresponding trigger display image.

Other Instructions:

- Trigger function can interrupt auto scan function.
- When the trigger signal is received, the monitor will switch into the trigger display image automatically and resume the previous state before the trigger occurs after delay time.
- Support trigger detection in standby mode.

14.9.4.1 INPUT PANEL

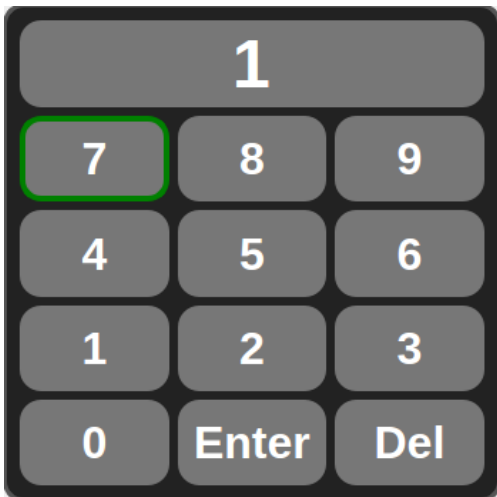

Touch Screen Instructions:

- Touch the icons to edit the value. Settings will return back to previous menu without saving if touch beyond the panel.

Other Instructions:

- Input number will turn to 60 if larger than 60.
- Enter: Save input. Number input in "Delay" will be saved if return to previous menu.
- Del: Delete number.




14.9.4.2 PRIORITY



Touch Screen Instructions:

- Touch the icons to edit the value. Settings will return back to previous menu without saving if touch beyond the panel.

14.9.5 AUTO SCAN

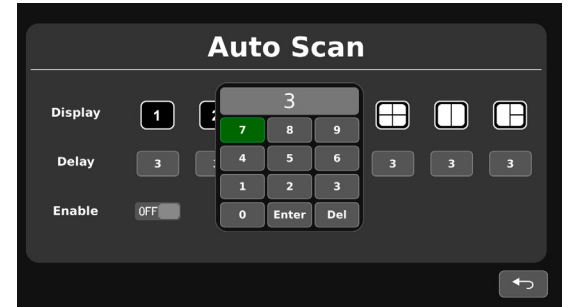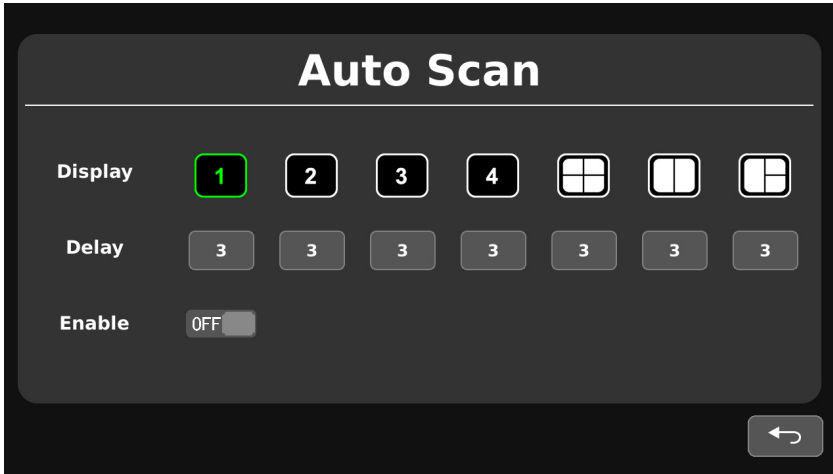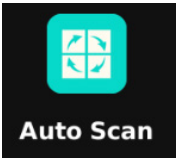

Touch Screen Instructions:

- Touch any of “Delay” line to activate digital input box. Touch Enable to turn on/off auto scan function
- Touch any of “Display” line to activate interface to select display images.


Feature Instructions:

- Display: to set preferred display image when in auto scanning.
- Delay: To set duration time of scanning image, ranging 0-60s. If delay of certain channel is set to 0, then auto scan will skip to another channel whose delay is longer than 0 second. Operation of the delay keypad is same as section 6.2.7.4.1 “Input panel.
- Enable: Turn on/off auto scan function.


Other Instructions:

- If parameters of “Display” or “Delay” are changed during auto scan, they will take effect on next cycle. User can also validate parameters immediately by turning off and on again the auto scan function. Auto scan can be interrupted by trigger function.

14.9.6 POWER ON

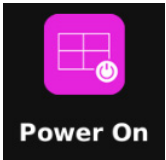


The "Power On" function lets you determine what channel combination will appear on monitor screen when monitor powers on.

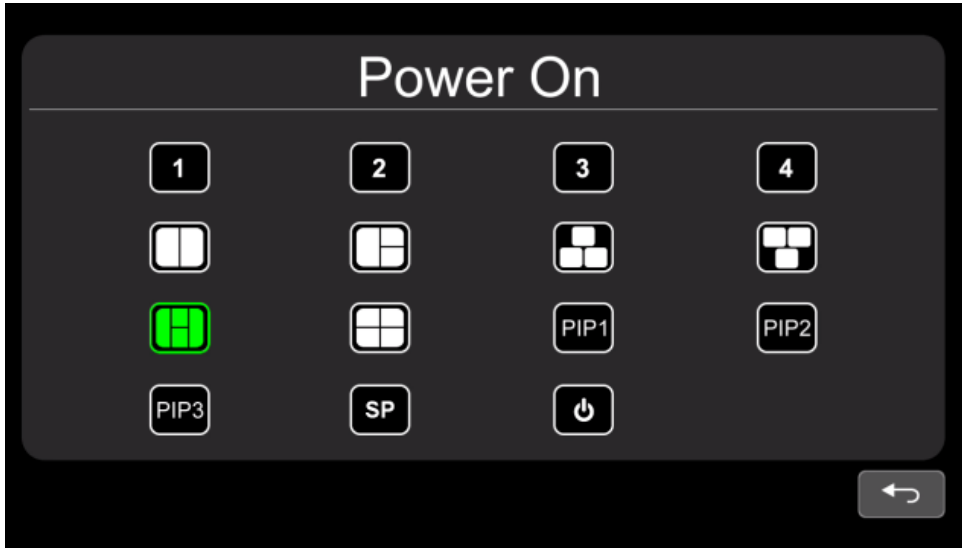



Touch Screen Instructions:

- If the icon is not highlighted, touch to highlight it or to cancel its highlight status.


Other Instructions:

- Highlighted icon is corresponding display image of monitor upon start up. Last icon once been highlighted, monitor will enter screen off standby mode directly upon power on.
- When no icon is green highlighted, it goes automatically to LAST mode, i.e. display image upon power on will be the last image of monitor when it's powered off last time.
- If the standby icon  is highlighted, monitor will display start up logo if any, then go to standby mode.

14.9.7 STANDARD

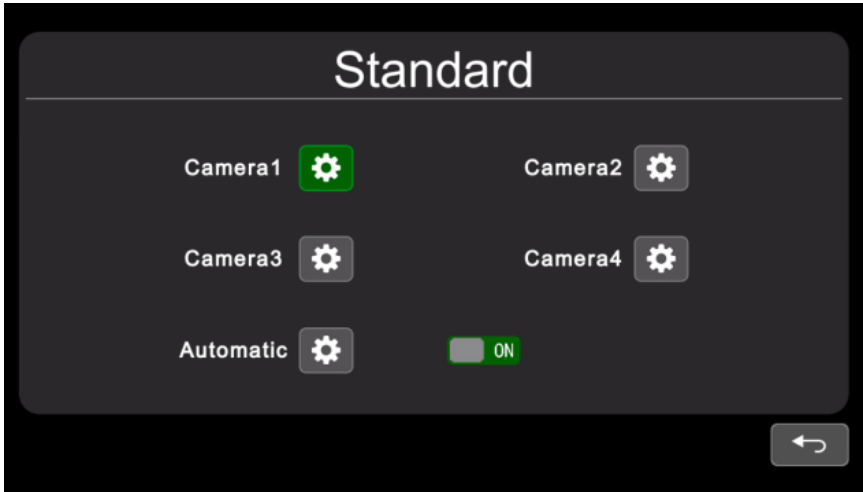

When "Automatic" is on, the monitor will automatically adjust for input cameras. If "Automatic" is off, the monitor will configure with user settings. User is able to set input formats of corresponding cameras via touching icon for each channel or turn on "Automatic" to enter automatic configuration. There will be progressing of automatic configuration, and it will display information of recognized camera after 100% finished. Or the information will be empty if camera can't be recognized in automatic process.

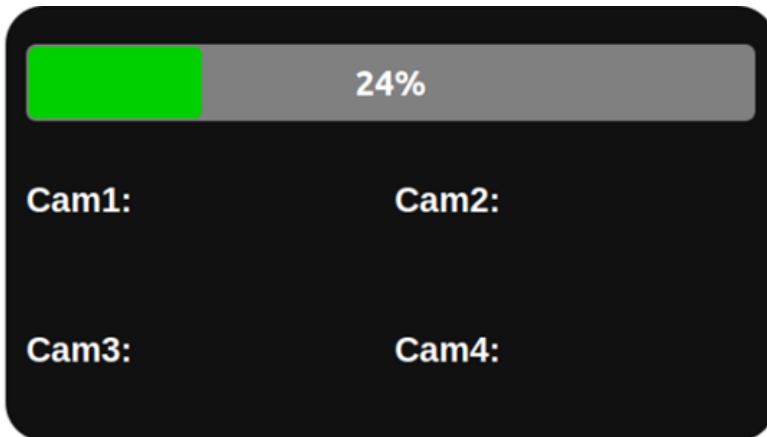

Remote Instructions:

- LANG: Switch system language.
- Menu: Return to previous menu. System can exit after progress bar reaches 100% in Automatic interface.


Other Instructions:

- When "Automatic" is turned ON, the HD monitor will adjust to display cameras automatically. When "Automatic" is turned OFF, the HD monitor will respond to fixed system settings in menu of CAMERA1~CAMERA4. This allows the user to manually set each camera input format or auto configure by touching the icon in "Automatic" menu.
- The HD monitor won't response to any press or touch operation before progress bar reaches to 100%. It's able to exit by press or touch only after 100% finished.

14.9.7.1 CHANNEL VIDEO STANDARD

While using Remote Control or Button Panel, the operation includes 2 selection phases.


- Phase 1 Type: If PAL or NTSC is selected, system won't enter phase 2.
- Phase 2 Resolution selection: If user enters this interface from "Standard" menu, it enters phase 1 by default.

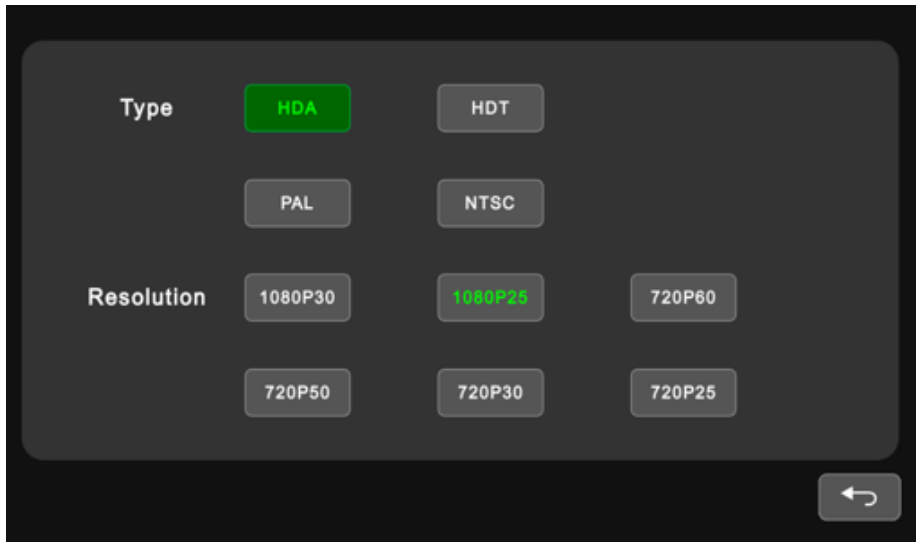

Touch Instructions:

- If PAL or NTSC is selected in TYPE, touch operation won't respond on Resolution selection.

14.9.8 CVBS MODE (VIDEO OUTPUT)

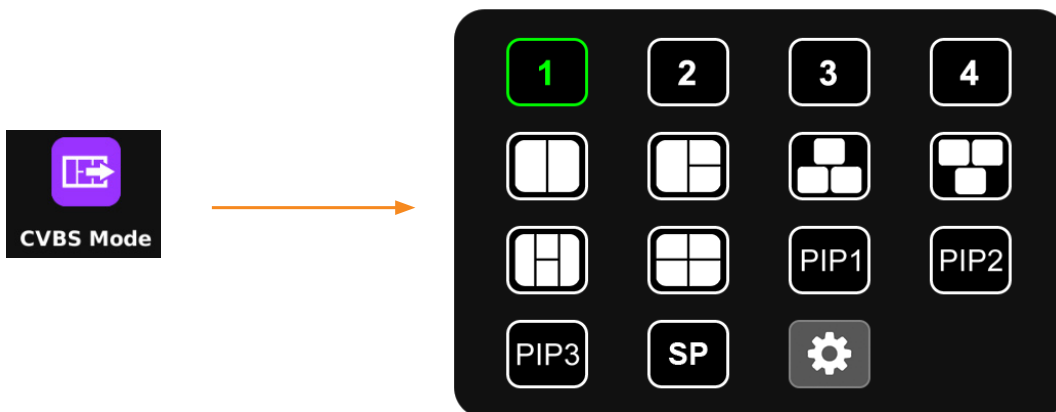

Touch Screen Instructions:

- Click the icon to switch to the output display mode of the CVBS;
- Click the area outside the menu to exit.

Remote Instructions:

- UP / DOWN: Cursor switch.
- SEL: Select the camera channel and audio output channel.


14.9.9 DISK



The Disk menu allows for viewing and formatting the SD card storage.


- Total data storage and amount of available data will be listed on the left side of the display. The green bar will fill up as more storage is utilized.
- Select the Format button to erase all data on the SD card and reformat. There will be a pop-up to confirm this action. When the process is complete the system will display a success message.

14.9.10 RECORD SETTING

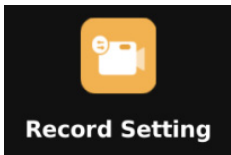


- Power On Rec.: When ON, system will automatically begin recording when monitor is powered on.
- File Length: Determines the length of saved files, from 5min, 10min or 15min.
- Resolution: Determines the resolution format of the saved file.
- Bitrate: Determines the bitrate quality of the saved file.

14.9.11 SYSTEM

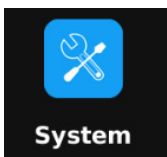


The System sub-menu allows for adjusting base monitor functions as well as importing/exporting calibrations.

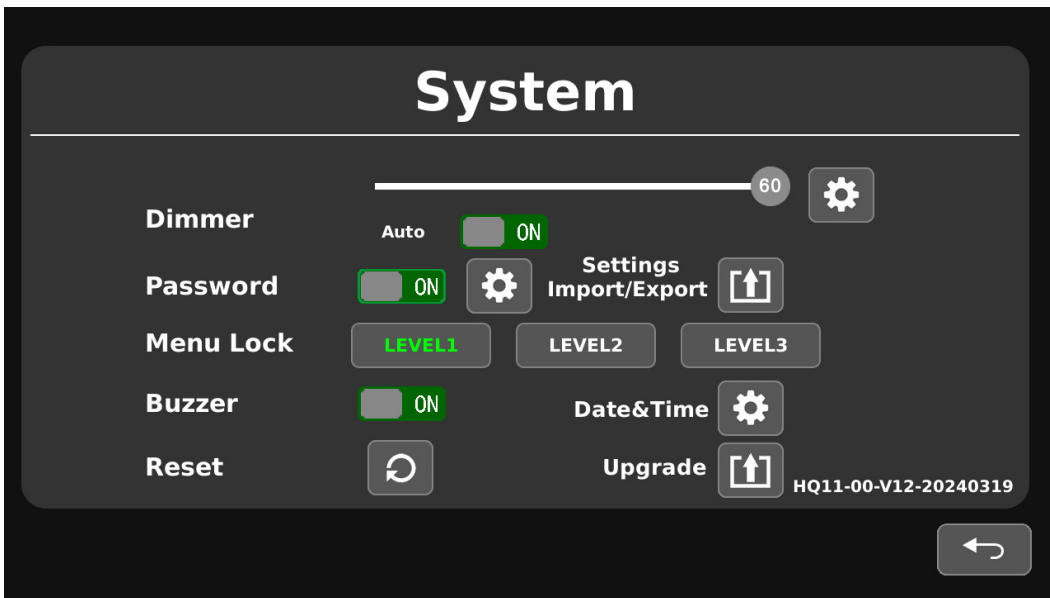


Feature Instructions:

- Password: Touch gear icon to setup monitor password protection. Password pop-up will appear when trying to enter settings menu from main screen.
- Settings Import/Export: Menu option to import or export all monitor settings to SD card storage.
- Buzzer: Enable/disable beeping sound with touching monitor screen.
- Date&Time: Setup time and date information for recorded files.
- Reset: Reset monitor to factory default settings.
- Upgrade: Initiate the installation of a new software package through SD card slot.

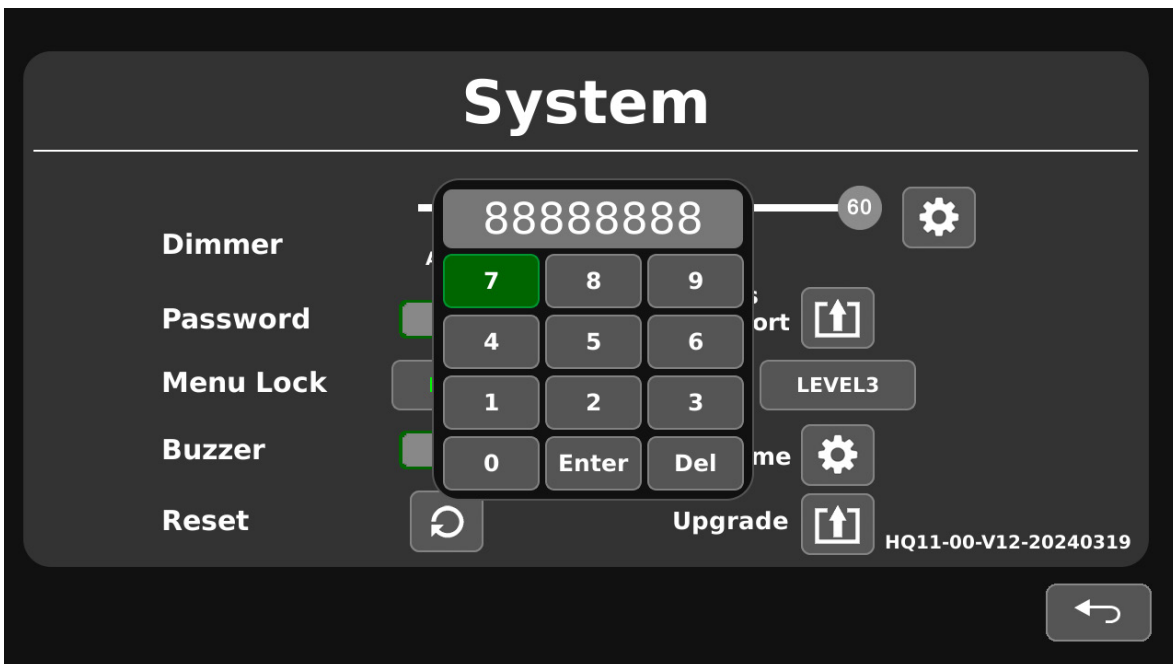

14.10 AUTO DIMMER

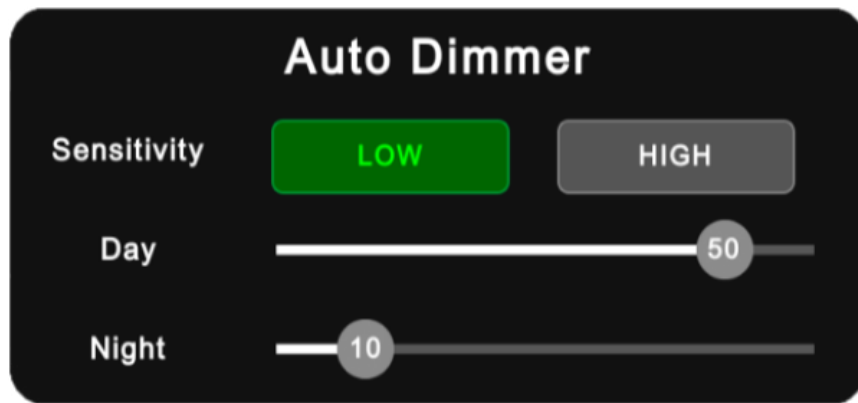


Touch Instructions:

- Drag scroll bar to adjust backlight of screen in corresponding Day/Night mode.

Feature Instructions:

- Day: Backlight degree of Day mode is always higher than that of Night mode, ranging from 0 - 60.
- Night: Backlight degree of Night mode is always lower than that of Day mode, ranging from 0 - 60.

15 WIRELESS CHANNEL DISPLAY

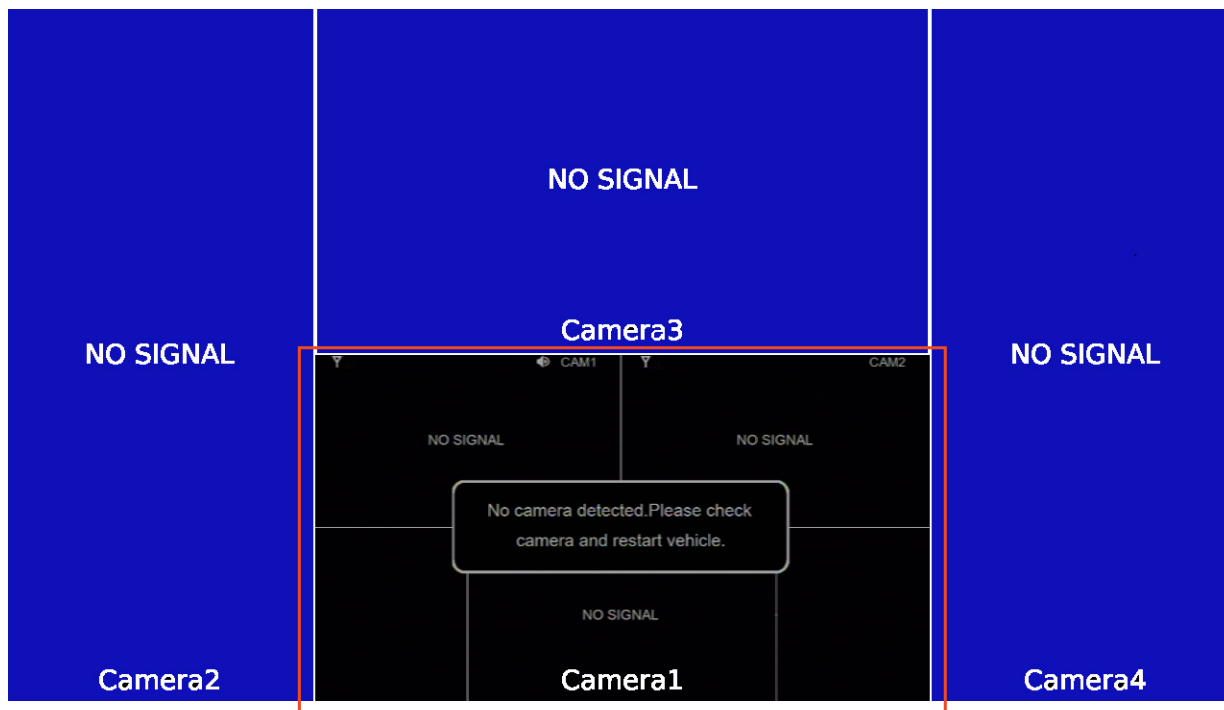


Searching for the camera...

When the monitor initially powers up it will search for a wireless transmitter.

Camera detected. Trying to pair.

The monitor will receive a response from the wireless transmitter over the power line and will begin a hand-shake process to fully pair together.


Paired

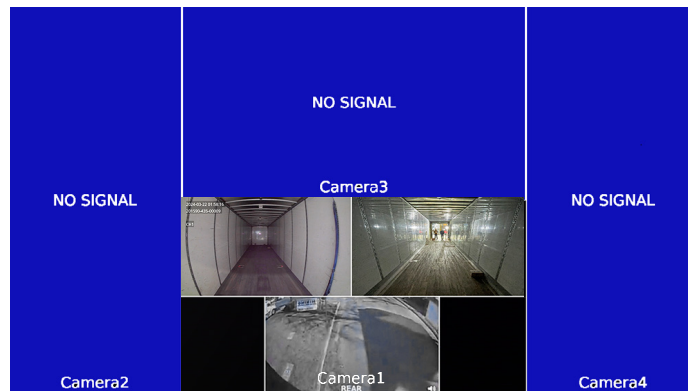

After completion of the hand-shake process, the monitor will display a 'Paired' message indicating that it has successfully connected to the transmitter and will begin communicating wirelessly.

No camera detected. Please check camera and restart vehicle.

If the monitor has successfully initialized but has not detected a wireless transmitter, it will display a 'No camera detected' message and wait for a transmitter to be connected.

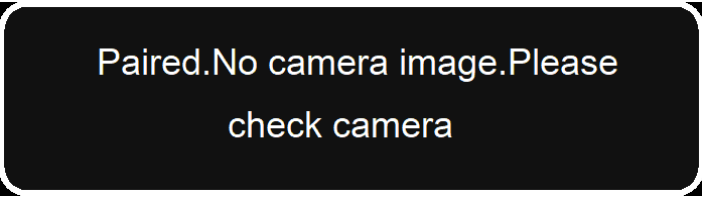


Paired.No camera image.Please
check camera

If the monitor and transmitter have successfully paired but the transmitter is not receiving a video image from the camera, a 'No camera image' error will appear on the display.



Failed

If the hand-shake process has failed and the monitor and transmitter cannot successfully pair, a 'Failed' message will appear on the display. Check physical connection between vehicle and trailer, press the 'Pair' button on the monitor to initialize a new pairing attempt.



Detecting last trailer...

When 'AUTO' is selected for the Wireless Trailer channel on the display, the system will automatically detect the last trailer connected to the vehicle and display this trailer view.

16. TROUBLESHOOTING

Symptoms	Possible Causes / Solutions
Monitor displays black screen or cannot pair	<ul style="list-style-type: none"> Verify that the device's POWER LED is illuminated. Verify existing trailer connections are secure Unplug all cables and leave out for 30 seconds and then reconnect them. Check to ensure that the connection to the camera is secure. Verify that the monitor's red +12V harness is connected to the same circuit as the wireless transmitter (Trailer Running Lights)
Monitor will not power up	<ul style="list-style-type: none"> Check fuse Check +12V connection to monitor Check ground connection (If the monitor light comes on, but monitor does not fully power up, it is most likely the ground connection being weak) Verify monitor circuit is turned on. Trailer Marker Lamp circuit for example.
'No camera detected' message	Power lost to transmitter, check power adapter connection. Transmitter not installed on same DC circuit as monitor, check installation.
No signal	Antenna disconnected. Transmitter in poor reception area.
No sound	Check whether the sound volume is turned off or set too low on monitor. Some cameras do not have audio function.
No image on screen	<ul style="list-style-type: none"> Check camera connection cable to transmitter. Check transmitter power. Verify camera in question is plugged into the correct camera input Verify power cable is connected to monitor Verify camera is connected to power Connect known working camera and cable to transmitter
Monitor always turns off	In the settings menu: disable 'Display Only In Reverse'
Continuous No Camera / Paired messages	Weak wireless connection between wireless transmitter and monitor. If possible, move wireless transmitter to more suitable location, install remote monitor antenna with better placement within vehicle.

Solutions for poor transmitter signal

1. Please confirm the antennas of the display and on the transmitter are perpendicular to the ground, and the antennas are tightened.
2. If there is metal shielding between the monitor and the camera, an extended antenna should be used to bypass the metal shielding to ensure smooth transmission of antenna signal in space.

THREE YEAR WARRANTY

REAR VIEW SAFETY, INC. WARRANTS THIS PRODUCT AGAINST MATERIAL DEFECTS FOR A PERIOD OF ONE YEAR FROM DATE OF PURCHASE. WE RESERVE THE RIGHT TO REPAIR OR REPLACE ANY SUCH DEFECTIVE UNIT AT OUR SOLE DISCRETION. REAR VIEW SAFETY, INC. IS NOT RESPONSIBLE FOR A DEFECT IN THE SYSTEM AS A RESULT OF MISUSE, IMPROPER INSTALLATION, DAMAGE OR MISHANDLING OF THE ELECTRONIC COMPONENTS. REAR VIEW SAFETY, INC. IS NOT RESPONSIBLE FOR CONSEQUENTIAL DAMAGES OF ANY KIND.

THIS WARRANTY IS VOID IF: DEFECTS IN MATERIALS OR WORKMANSHIP OR DAMAGES RESULT FROM REPAIRS OR ALTERATIONS WHICH HAVE BEEN MADE OR ATTEMPTED BY OTHERS OR THE UNAUTHORIZED USE OF NONCONFORMING PARTS; THE DAMAGE IS DUE TO NORMAL WEAR AND TEAR, THIS DAMAGE IS DUE TO ABUSE, IMPROPER MAINTENANCE, NEGLIGENCE OR ACCIDENT; OR THE DAMAGE IS DUE TO USE OF THE REAR VIEW SAFETY, INC. SYSTEM AFTER PARTIAL FAILURE OR USE WITH IMPROPER ACCESSORIES.

WARRANTY PERFORMANCE

DURING THE ABOVE WARRANTY PERIOD, SHOULD YOUR REAR VIEW SAFETY PRODUCT EXHIBIT A DEFECT IN MATERIAL OR WORKMANSHIP, SUCH DEFECT WILL BE REPAIRED WHEN THE COMPLETE REAR VIEW SAFETY, INC. PRODUCT IS RETURNED, POSTAGE PREPAID AND INSURED, TO REAR VIEW SAFETY, INC. OTHER THAN THE POSTAGE AND INSURANCE REQUIREMENT, NO CHARGE WILL BE MADE FOR REPAIRS COVERED BY THIS WARRANTY.

WARRANTY DISCLAIMERS

NO WARRANTY, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, OTHER THE ABOVE WARRANTY IS MADE WITH REGARD TO THIS REAR VIEW SAFETY, INC. REAR VIEW SAFETY, INC. DISCLAIMS ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR USE OR PURPOSE AND ALL OTHER WARRANTIES IN NO EVENT SHALL REAR VIEW SAFETY, INC. LIABLE FOR ANY INCIDENTAL, SPECIAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES OR FOR ANY COSTS, ATTORNEY FEES, EXPENSES, LOSSES OR DELAYS ALLEGED TO BE AS A CONSEQUENCE OF ANY DAMAGE TO, FAILURE OF, OR DEFECT IN ANY PRODUCT INCLUDING, BUT NOT LIMITED TO, ANY CLAIMS FOR LOSS OF PROFITS.

DISCLAIMER

REAR VIEW SAFETY AND/OR ITS AFFILIATES DOES NOT GUARANTEE OR PROMISE THAT THE USER OF OUR SYSTEMS WILL NOT BE IN/PART OF AN ACCIDENT OR OTHERWISE NOT COLLIDE WITH AN OBJECT AND/OR PERSON. OUR SYSTEMS ARE NOT A SUBSTITUTE FOR CAREFUL AND CAUTIOUS DRIVING OR FOR THE CONSISTENT ADHERENCE TO ALL APPLICABLE TRAFFIC LAWS AND MOTOR VEHICLE SAFETY REGULATIONS. THE REAR VIEW SAFETY PRODUCTS ARE NOT A SUBSTITUTE FOR REAR VIEW MIRRORS OR FOR ANY OTHER MOTOR VEHICLE EQUIPMENT MANDATED BY LAW. OUR CAMERA SYSTEMS HAVE A LIMITED FIELD OF VISION AND DO NOT PROVIDE A COMPREHENSIVE VIEW OF THE REAR OR SIDE AREA OF THE VEHICLE. ALWAYS MAKE SURE TO LOOK AROUND YOUR VEHICLE AND USE YOUR MIRRORS TO CONFIRM REARWARD CLEARANCE AND THAT YOUR VEHICLE CAN MANEUVER SAFELY. REAR VIEW SAFETY AND/OR ITS AFFILIATES SHALL HAVE NO RESPONSIBILITY OR LIABILITY FOR DAMAGE AND/OR INJURY RESULTING FROM ACCIDENTS OCCURRING WITH VEHICLES HAVING SOME OF REAR VIEW SAFETY PRODUCTS INSTALLED AND REAR VIEW SAFETY AND/OR ITS AFFILIATES, THE MANUFACTURER, DISTRIBUTOR AND SELLER SHALL NOT BE LIABLE FOR ANY INJURY, LOSS OR DAMAGE, INCIDENTAL OR CONSEQUENTIAL, ARISING OUT OF THE USE OR INTENDED USE OF THE PRODUCT. IN NO EVENT SHALL REAR VIEW SAFETY AND/OR ITS AFFILIATES HAVE ANY LIABILITY FOR ANY LOSSES (WHETHER DIRECT OR INDIRECT, IN CONTRACT, TORT OR OTHERWISE) INCURRED IN CONNECTION WITH THE SYSTEMS, INCLUDING BUT NOT LIMITED TO DAMAGED PROPERTY, PERSONAL INJURY AND/OR LOSS OF LIFE. NEITHER SHALL REAR VIEW SAFETY AND/OR ITS AFFILIATES HAVE ANY RESPONSIBILITY FOR ANY DECISION, ACTION OR INACTION TAKEN BY ANY PERSON IN RELIANCE ON REAR VIEW SAFETY SYSTEMS, OR FOR ANY DELAYS, INACCURACIES AND/OR ERRORS IN CONNECTION WITH OUR SYSTEMS FUNCTIONS.





A Safe Fleet Brand

Engineered For Vehicle Safety™

If you have questions about this product,
please contact us at:

800.764.1028 RVS.Sales@safefleet.net
www.rearviewsafety.com

New York

1797 Atlantic Ave
Brooklyn, NY 11233

Indiana

319 Roske Dr.
Elkhart, Indiana 46516

Canada

68 Trafalgar Square
Thornhill, ON, L4J 7M5, Canada